 




**USER MANUAL – EN**  
**IN 18412 Massage Chair inSPORTline Mateo**

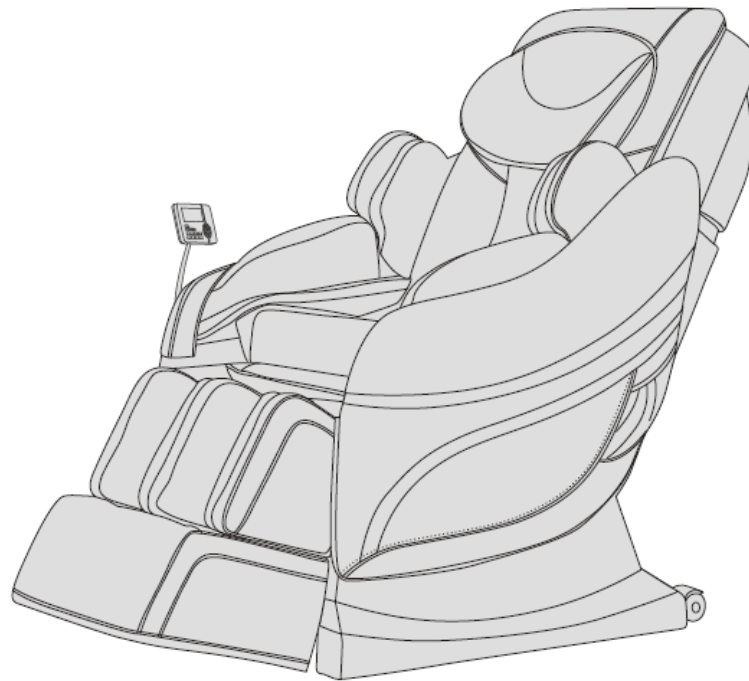

# CONTENTS

- SAFETY PRECAUTIONS..... 3
- PARTS..... 5
- CHARACTERISTIC ..... 5
- CONTROLS..... 6
- CONNECTION OF THE DEVICE..... 6
  - SETTING UP THE LEGHT OF THE MASSAGE ..... 7
  - CHOOSING THE MASSAGE ..... 7
  - ADDITIONAL FUNCTIONS ..... 9
  - TURNING OFF THE DEVICE ..... 11
  - SAVING MP3 FILES ..... 11
- ASSEMBLY ..... 11
  - ARM REST..... 11
  - CONTROL PANEL..... 13
- PROTECTION OF THE FLOOR ..... 15
- MOVING THE MASSAGE CHAIR..... 15
- PRODUCT SPECIFICATION ..... 15
- ENVIRONMENT PROTECTION ..... 16
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 16

Thanks for purchasing this product. Please read this manual carefully in order to know how to use this product correctly before operation. Please pay attention to some important safety warning and keep this manual for future references.

Note: Our Company reserves the right to revise the design and description of this product without any further notice.

## **SAFETY PRECAUTIONS**

### **IMPORTANT SAFETY WARNINGS**

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Kids can move around this product only under adult supervision.
- Use only well-grounded socket and proper power cord.
- Pull out the plug after every use or during maintenance to avoid injury or damaging the product.
- Please use this product according to the manual.
- Do not use unauthorized modifications or accessories.
- Only for indoor use.
- Before first use, please read the manual carefully.
- Use this product as is described in the manual.
- Recommended maximum use time is 20 minutes.
- Do not use the device if it is damaged. (frame, leather etc.)
- Do not use the chair if the ventilation is blocked.
- No not put on chair heavy items or objects with sharp edge.
- Do not fall asleep during massage for safety reasons.
- Do not use the chair after you consumed alcohol or other drugs or if you are sick or dizzy.
- Do not use within one hour after meal.
- Please be caution and do not use too strong massage.
- **Maximum load:** 150 kg

### **POSITION OF MASSAGE CHAIR**

- Do not use the chair in high temperatures or moist environments (e.g. bathroom).
- Do not use the chair immediately after temperature change.
- Do not use in dust or impropriety rooms.
- In is important to secure enough space and ventilation.

### **PEOPLE THAT SOULD NOT USE THE PRODUCT**

- People suffering from osteoporosis.
- People who has hearth problems or are using electronic medical equipment (e.g. peacemaker).
- People suffering fever.
- Pregnant women.
- People suffering skin diseases.

- Kids younger 14 years old or people suffering mental illness can use this product only under adult supervision.
- People that are recommended rest from the doctor or people suffering from sickness.
- Do not use this chair if you have wet body.
- Do not use the heat function if you are heat sensitive.

 
#### **SAFETY**

- Maintenance should be done only by qualified person. User should not disassemble the chair or do the maintenance by themselves.
- After every use unplug the cord.
- Do not use the product if the power cord, plug or socket are damaged.
- If you are not using the chair for long period of time, store it at a clean and dry place and secure the power cord.
- Do not expose the chair to high temperatures, direct sunlight and do not place the chair near heat source.
- If the power cord, plug or socket are damaged, ask professional or qualified person for help.
- For cleaning use wet sponge only. Do not use thinner, gasoline or alcohol for cleaning.
- Mechanical parts are assembled and made to require minimum maintenance.
- Pay extra attention to not damage the chair with sharp objects.
- Do not push the chair on uneven ground, always pick the chair up and then move.
- Do not let the chair to work for long periods of time.

#### **COMMON PROBLEMS AND SOLUTIONS**

- It is common that the motor is making sounds.
- If the chair is not working please check the power cord, plug and socket and that the switch is ON.
- After the massage time is over the massage chair will turn OFF. The product will automatically shutdown if it is overheated – wait at least half an hour before next massage.

## PARTS

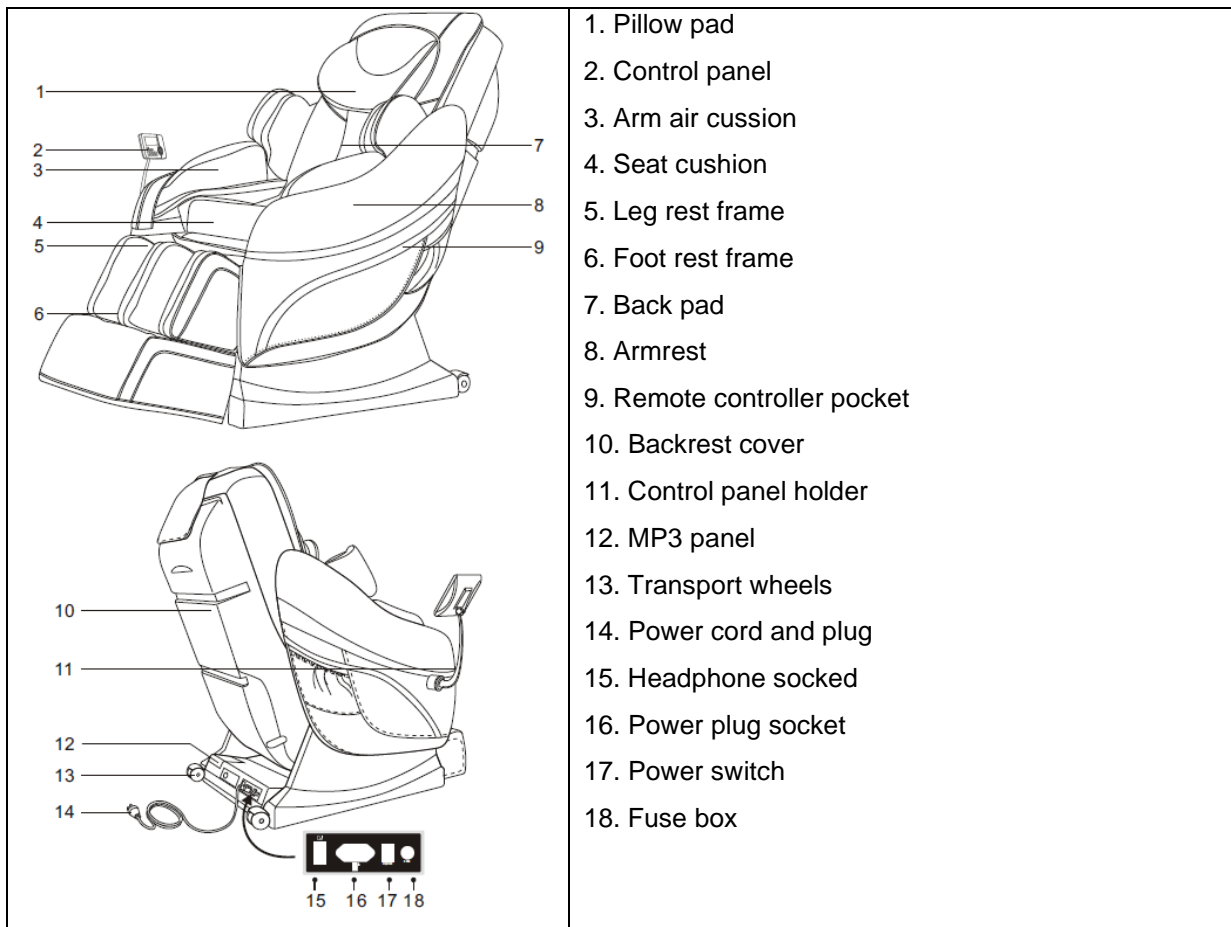


## CHARACTERISTIC

- Massage chair has set of 4 silent 3D massage heads, which are moving up and down and are stretching back and forth.
- The shoulder pad has automatic micro adjustment detection. This system can adjust the massage heads according to the body position and massage points which makes the massage more pleasant and efficient.
- Computer is equipped with automatic massage programs.
- Up to 3 user programs can be saved.
- Main massages are automatic massage, massage with hot air cushion, spiral massage of lions, vertical massage of thighs and stretching massage.
- User can choose from all types of massages of upper body: complete/local massage/ body massage. Massage of shoulders is divided into 6 types: massage with all fingers, massage with palms, massage with thumbs, combined massage, 3D massage. Intensity can be adjusted with 5 levels. Massage with pals or thumbs can be adjusted into 5 positions.
- The massage of arms is done with 26 air cushion – intensity can be adjusted in 3 levels.
- For air cushion massage of upper body, the chair has 4 cushion in back pad, 16 cushion in seat and 38 cushion in leg pad.
- MP3 player has these functions: pause, play, next song, previous song, volume up and down.
- Back support is provided with heat function with infra light thanks to the carbon fiber.

- Feet support height can be adjusted.
- The massage chair support back and leg adjustment.
- After the user sits into the chair the chair will recognize the right position of massage heads. After you turn off the chair, all heads will return to default position.
- Control panel is equipped with VFD display.
- Accessories: MP3 panel, headphones, USB disk.

## CONTROLS
 
### CONTROL PANEL

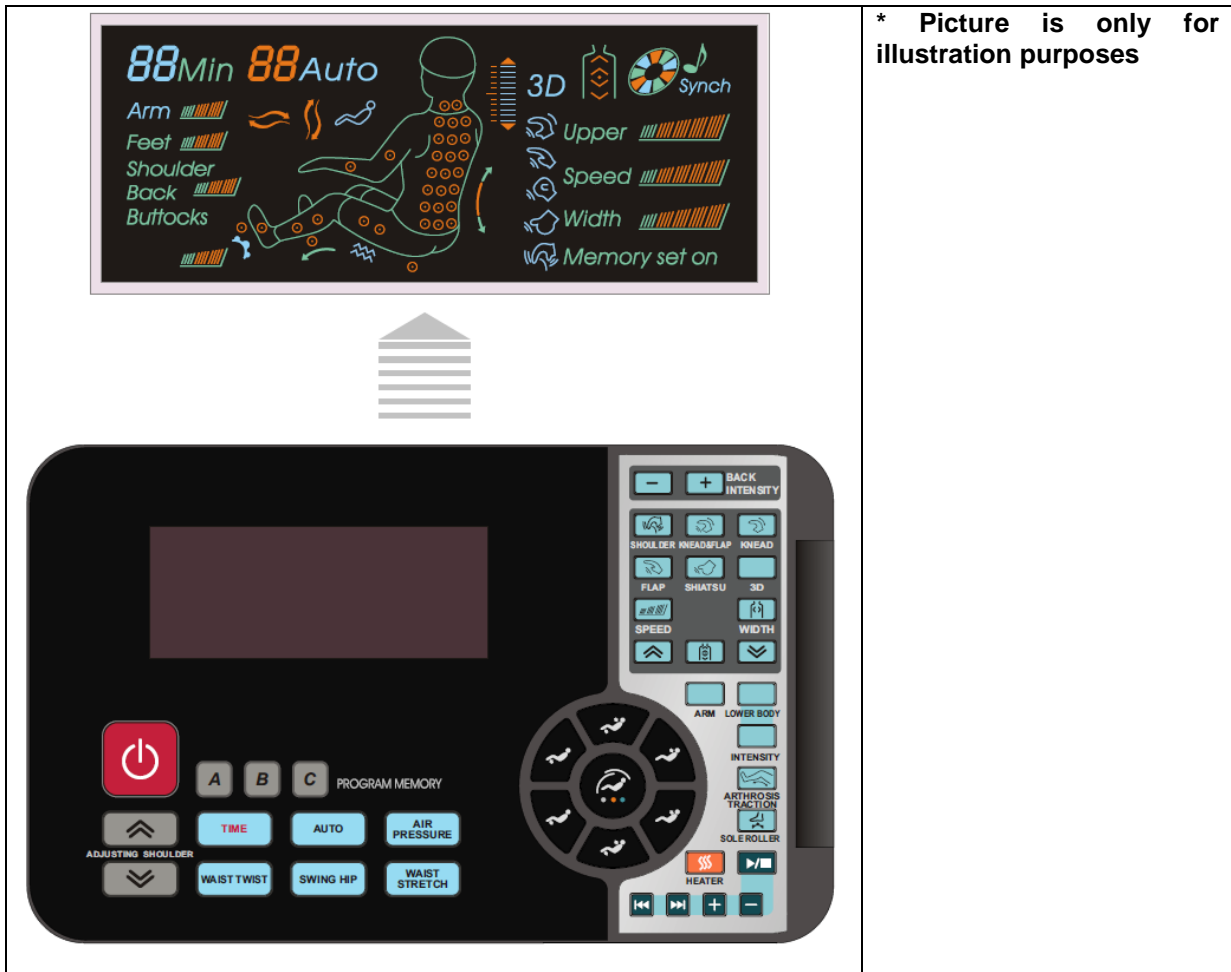


## CONNECTION OF THE DEVICE





 Connect the plug to the socket

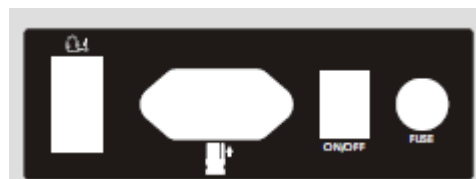





Turn on the switch

 





 





## TURNING ON THE MASSAGE

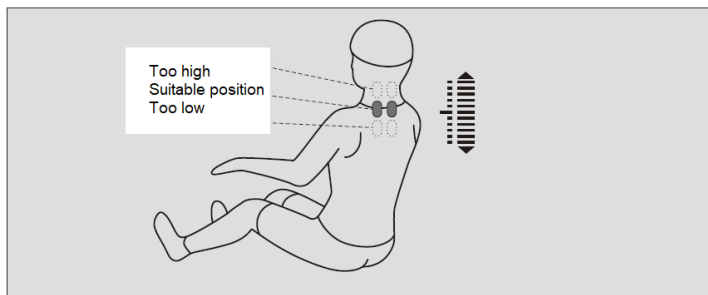- If you press the  button the massage will turn on after the back pad and leg rest frame are adjusted to appropriate position. If you hold the  button, the massage will start immediately without the adjustment.
- System automatically detect positions of shoulders and massage points. After the detection is completed the sound alarm will be signaling.
- In case of need the position of shoulder pads can be change with buttons  and . If the change is not within 10 seconds of automatic detections the massage will start.

 
Button for moving the massage heads up	 Button „Up “	
Button for moving the massage heads down	 Button „Down “	

Right positions of massage heads:




- User can choose type of massage.
- For saving actual massage press on/off button to stop the massage chair, you will hear a sound signal and buttons ,  or  will light up. Press buttons ,  or  to save the massage.
- To turn on saved massage, turn on the chair and press buttons ,  or .




## SETTING UP THE LEGHT OF THE MASSAGE


Button	Characteristic
	Default time is 20 minutes. Maximum massage time is 40 minutes. Each press of „TIME“ button add 5 minutes. After 40 minutes the time will return to lowest time of 5 minutes.

## CHOOSING THE MASSAGE

     
 
 
 
### AUTOMATIC MESSAGE

Button	Characteristic	Display shows
	Relaxing massage: relaxing muscles and regenerating joints	<i>Auto</i> <b>F1</b>

	Gentle massage: increasing blood circulation	Auto F 2
	Massage against pain: Deep massage to relieve pain in the affected areas	Auto F 3
	Stimulating massage: removing fatigue and stimulating the body	Auto F 4





**NOTE:** Press the  button until the display shows wanted massage.

### MESSAGE FUNCTION






 

 


Button	Characteristic	Display shows
	Complete massage with air cushions: hips, buttocks, upper limbs, calves.	Auto F 5
	Spiral Massage: the air cushions in the hip area move spirally and the saddle pads move vertically.	Auto F 6
	Vertical massage buttocks: pads in the saddle area move vertically.	Auto F 7
	Stretching massage: the calves are clenched with air cushions, the backrest is lowered, the footrests move downwards and stretches the middle part of the body. Seat cushions and massage mechanism are active.	Auto F 8

*To access the following buttons and features, open the black door cover on the right side of the control panel.*






### INTENSITY ADJUSTMENT





 



Button	Characteristic	Display shows
	Button to reduce the intensity of back massage.	Upper 
	Button to increase the intensity back massage.	Upper 


### CHOOSING THE TYPE OF MASSAGE

Button	Characteristic	Display shows
	Massage on the shoulder area: automatic mode, speed and strength can be controlled.	 (H1)
	Combination massage: automatic mode, speed and strength can be controlled.	 (H1)
	Finger massage: Automatic mode, speed and strength can be controlled.	 (H1)
	Palm Massage: 2 different modes, speed, span of heads and power can be controlled.	 (H1-H2)
	Thumb Massage (Shiatsu): 2 different modes, speed, span of heads and force can be controlled.	 (H1-H2)



 







 <b>3D</b>	3D massage: 4 different modes, speed and strength can be controlled.	<b>3D (H1-H4)</b>
 <b>SPEED</b>	Speed: Can be set in 5 levels.	Speed 
 <b>WIDTH</b>	Spacing of massage heads: 5 different positions (in Flap and Shiatsu modes)	Width 



Button	Characteristic	Display shows
	Massage focused on 1 point	
	Local massage	
	Complete massage	
	Buttons to change the position of the massage heads (only for spot and local massage)	Move the massage heads down
		Move the massage heads up

 

**NOTE:** The  button can not be used for shoulder massage.

### MESSAGE AIR CUSSION





 


Button	Characteristic	Display shows
 <b>ARM</b>	Massaging the upper body: After pressing this button, a forearm and arm massage starts. The intensity can be set in 3 steps.	Arm 
 <b>LOWER BODY</b>	Body Lower Body Massage: Functions for foot massage, loin and buttocks.	Feet  Back  buttocks
 <b>INTENSITY</b>	Button for setting the intensity of the massage. The intensity can be set in 3 levels.	
 <b>ARTHROSIS TRACTION</b>	Functions accompanying lower body half massage and calf massage.	

### ADDITIONAL FUNCTIONS











Button	Characteristic	Display shows
 <b>SOLE ROLLER</b>	Foot massage: intensity can be set in 3 levels.	

 <b>HEATER</b>	Thermal therapy: Functions for heating the backrests and knees. The function will take effect within 3 minutes of activation.	
--	---	---

 
## CALF AND BACK REST ADJUSTMENT

	Automatic setting: 4 preset positions, press the button repeatedly to set position	Auto (01 ~ 04)
	Raising the calf rest, holding the button will slowly raise the calf rest, release the button to stop	
	To lower the calf rest, hold down the button to slowly lower the calf rest, release the button to stop	
	Raising the backrest, holding down the button will slowly raise the backrest, release the button to stop	
	Lowering the backrest, holding down the button will slowly lower the backrest, release the button to stop	
	Combined adjustment: pressing the button will slowly raise the backrest and slowly lower the calf support. To stop, release the button.	
	Combined adjustment: pressing the button will slowly lower the backrest and slowly raise the calf support. To stop, release the button.	

## MP3 PLAYER

Button	Characteristic	Display shows
	Play/ Pause	
	Previous song	
	Next song	
	Turn up volume	
	Turn down volume	

## TURNING OFF THE DEVICE

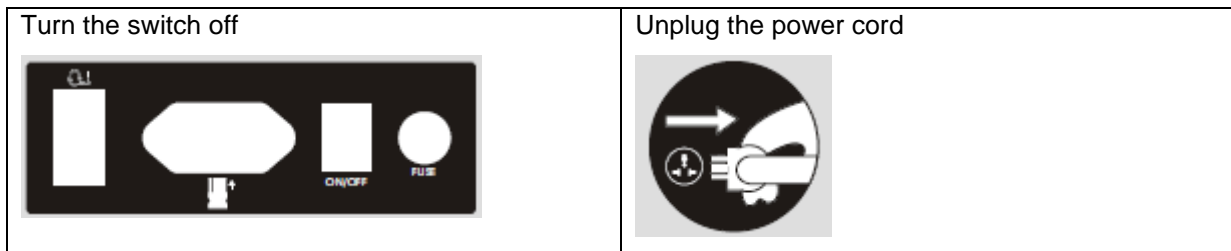


## SAVING MP3 FILES

- Stop the massage.
- Unplug the USB disk from MP3 unit.
- Plug the USB disk to computer (Windows XP, Windows 2000, Windows NT).
- Save MP3 files to USB. If needed format the USB disk.
- After storing the MP3 files, remove the disk.
- Unplug the USB disk.
- Plug the USB disk to MP3 unit.
- Now you can listen to songs, turn on the massage chair.

### NOTE:

 - If the MP3 player is not working, please try to format USB disk and then store song on USB disk.
- Do not try to disassemble the MP3 players from the massage chair.

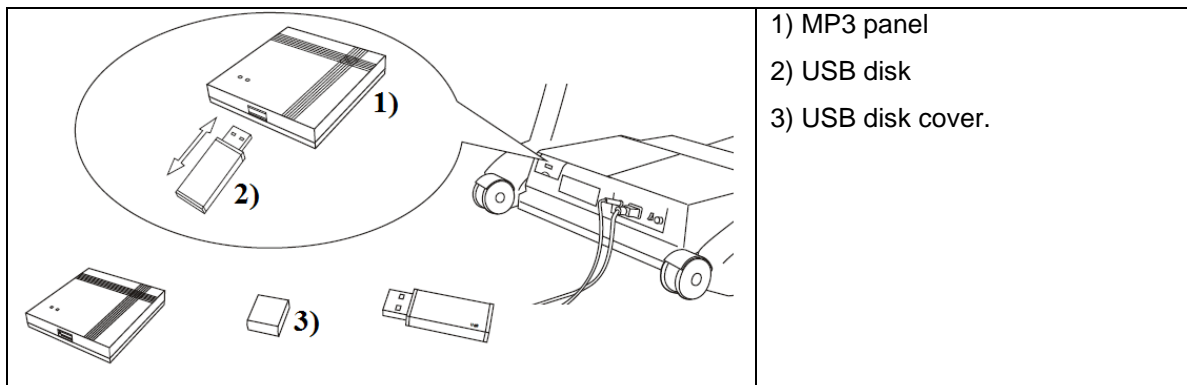


## ASSEMBLY


### ARM REST

- Check if the inner holders are attach to the armchair frame. (Picture 1)
- Open the zipper on the bottom of the arm rest.
- Open the lard and small compartment outside of the arm rest. (Picture 2)
- Life the arm rest and place it on the chair. Pull the air hose out of the seat frame and slide it through the opening on the inside of the arm rest. (Picture 3)
- Attach the arm rest on holders. (Picture 4)

 
- Screw the bolt. (Picture 5)

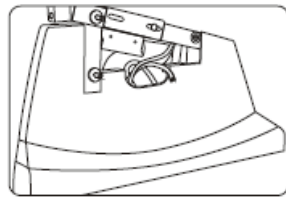


Picture 1

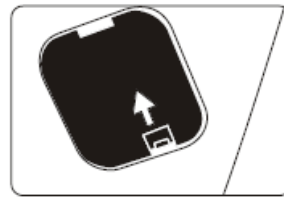 



Picture 2

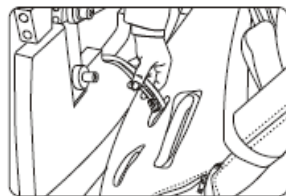 

Picture 3

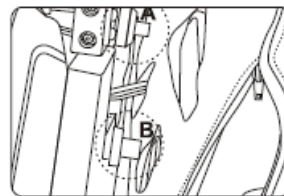 


Picture 4

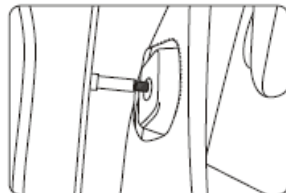  


Picture 5

 - Hold the arm rest, put on the screw the distance circle, washer and screw with self-locking nut. Tight properly with the key. (Picture 6)
- Insert the Allen screw with the upper fixing cap, then screw the cap to the top of the holder. (Picture 7)
- Insert the Allen screw with the lower fixing cap, then screw the cap to the bottom of the holder. (Picture 7)

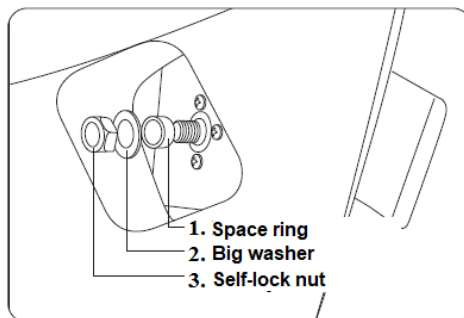


Picture 6

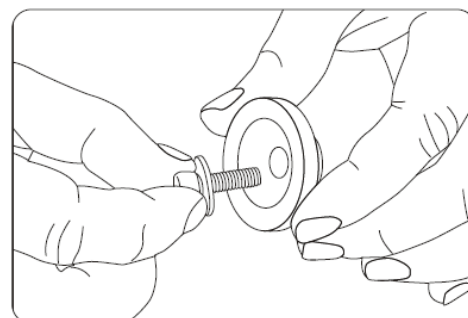 


Picture 7

 
- Connect the air hose to connectors inside the metal frame of the chair. (Picture 8)
- Check the connection of the arm rest to the frame. If the arm rest is tightly holding on the frame, snap the caps on the outside of the arm rest. (Picture 9)
- Finish the assembly by closing the zipper on the bottom side.

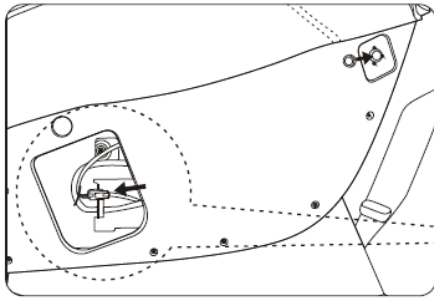

Picture 8

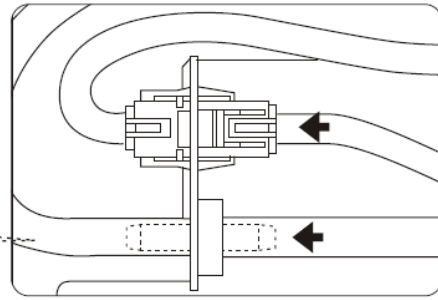 

Detail

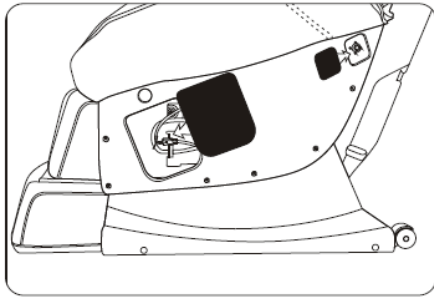 


Picture 9


When you are lifting from the massage chair, to not push on the restraints.



 Do not push the pillows for arm massage.

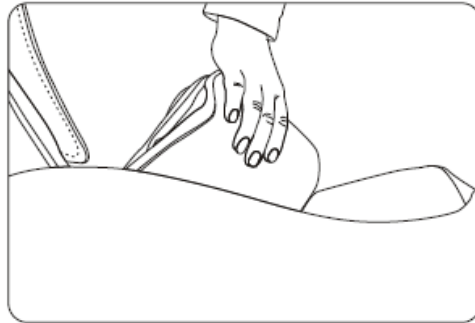


## CONTROL PANEL

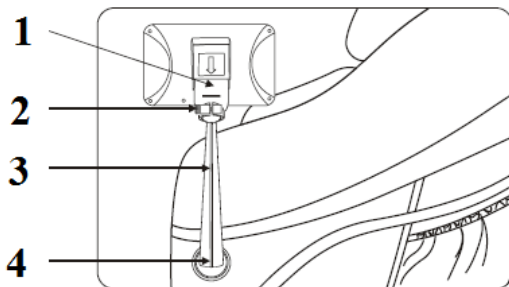 


1. Control panel holder
2. Screw
3. Post
4. Fixing foot

 - First unscrew the screw from the control panel bracket. (Picture 1)
- Attach the bracket to the post. (Picture 2)

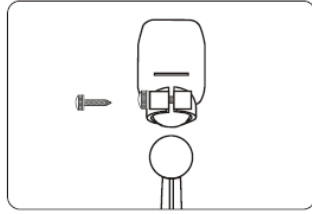


Picture 1

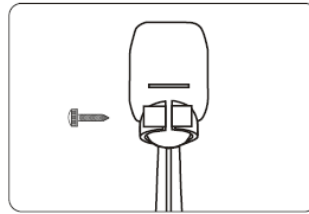 


Picture 2

 - Screw the bolt back into the holder. (Picture 3)
- Mount the fixing foot. (Picture 4)

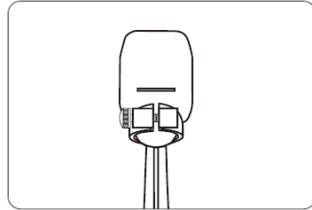


Picture 3

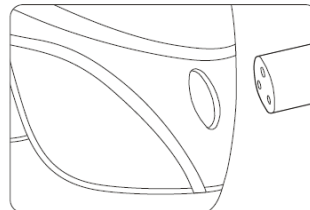 


Picture 4

 - Insert the fixing holder into the hole in the right back so that the groove in the foot is facing down. (Picture 5)
- Fix the foot with three screws. (Picture 6)

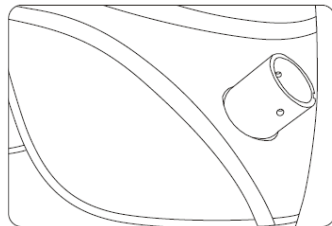


Picture 5

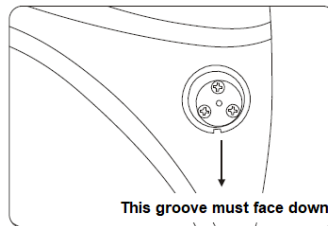 


Picture 6

 - Mount the post to the fixing pin. (Picture 7)
- Attach the post to the fixing foot - make sure that the screw holes are adjacent to each other. (Picture 8)

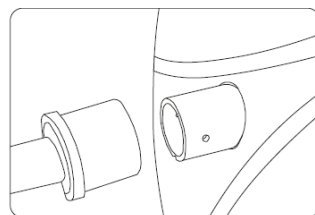


Picture 7

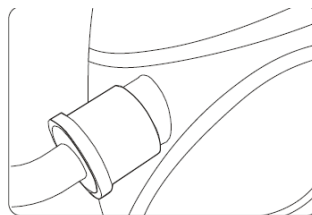 


Picture 8

 - Fasten the post to the foot with two screws. (Picture 9 and 10)

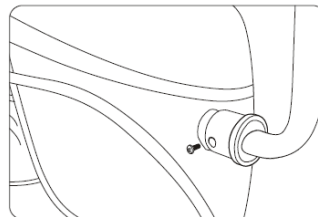


Picture 9

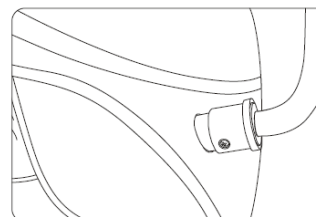 

Picture 10

## ADJUSTMENT OF THE DISPLAY

 
- The control panel holder enables both horizontal and vertical adjustment of the display.

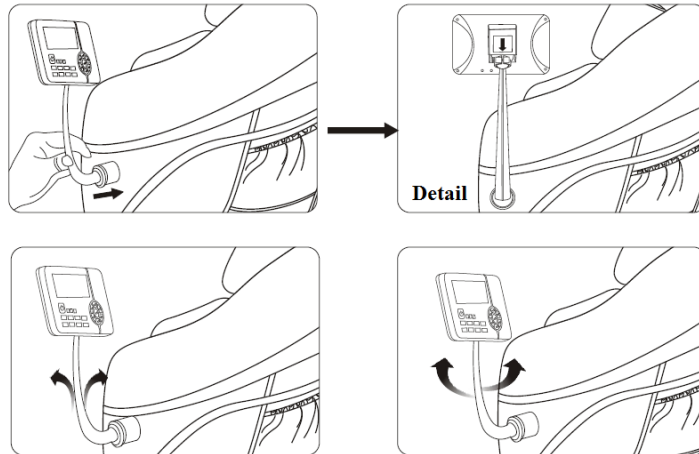

## PROTECTION OF THE FLOOR


After a long time stand of the massage chair can damage the wooden floor. It is recommended to use carpet or protection pad.

 **WARNING:** No not move the chair on transport wheel on wooden floor, uneven ground or when you do not have enough space. Chair should be lifted with at least 2 persons.

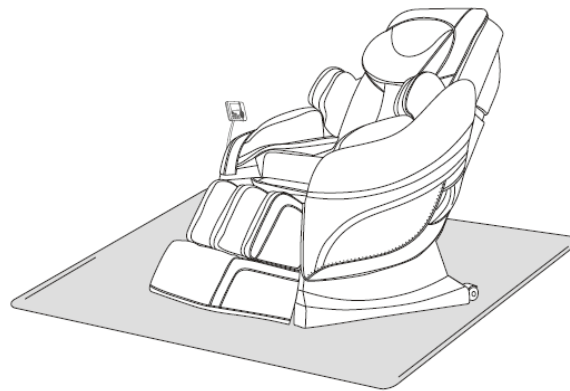

## MOVING THE MASSAGE CHAIR

 Before tilting the chair on the wheels, make sure you do not interfere with any cables while moving. Fold the chair on the wheels and move it to the desired position.

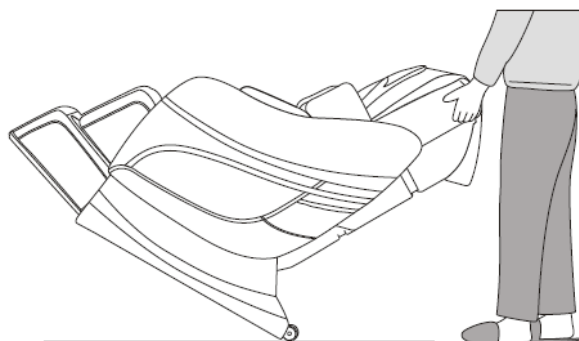

## PRODUCT SPECIFICATION

**MODEL:** A33

**NAME:** Massage chair

**CONFIGURATION: 05**

**POWER VOLTAGE:**

110-120V    60Hz

220-240V    50Hz / 60Hz

**NOMINAL POWER: 220W**

**RECOMMENDED MAXIMUM TIME OF OPERATION: 20 minutes**

**SAFETY CLASS: I**

**USED MATERIALS:** PVC, PA fiber, steel components, electric and electronic parts

MATERIAL	PU	LEATHER	FABRIC	WOOD

## ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

#### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.



By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

**The Warranty does not cover defects resulting from (if applicable):**

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

**Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ  
SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR  
Headquarters: Dělnická 957, Vítkov, 749 01  
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264  
VAT ID: CZ26847264

Phone: +420 556 300 970  
E-mail: [eshop@insportline.cz](mailto:eshop@insportline.cz)

reklamace@insportline.cz  
servis@insportline.cz

Web: [www.inSPORTline.cz](http://www.inSPORTline.cz)

**SK**  
**inSPORTline s.r.o.**

Headquaters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: [objednavky@insportline.sk](mailto:objednavky@insportline.sk)  
[reklamacie@insportline.sk](mailto:reklamacie@insportline.sk)  
[servis@insportline.sk](mailto:servis@insportline.sk)

Web: [www.inSPORTline.sk](http://www.inSPORTline.sk)