




USER MANUAL – EN

IN 20764 Multigym inSPORTline Profigym C300

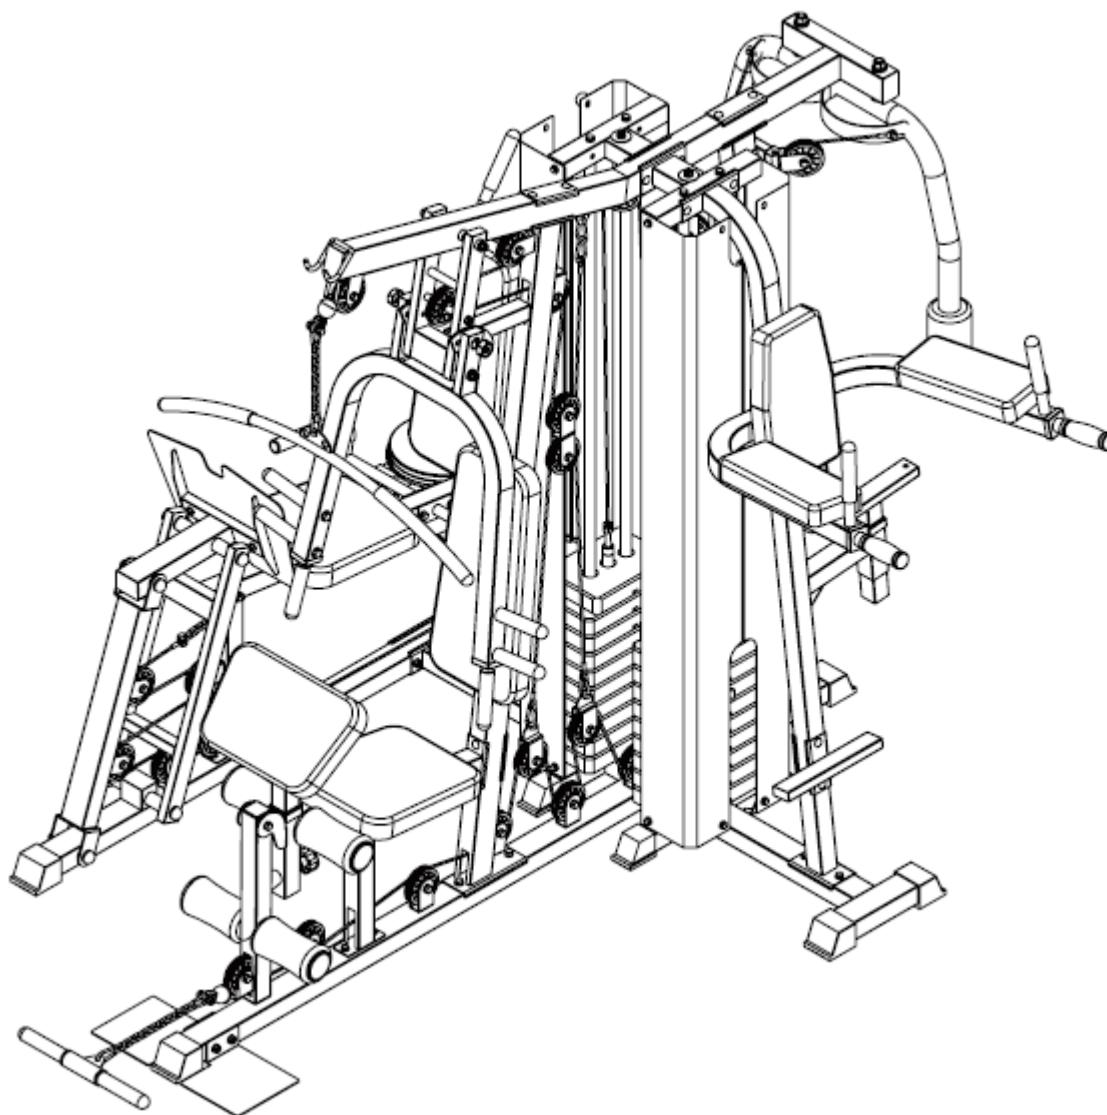

CONTENTS

- SAFETY INSTRUCTIONS..... 3
- PARTS LIST 4
- ASSEMBLY 7
 - STEP 1..... 7
 - STEP 2..... 8
 - STEP 3..... 9
 - STEP 4..... 10
 - STEP 5..... 11
 - STEP 6..... 12
 - STEP 7..... 13
 - STEP 8..... 14
 - STEP 9..... 15
 - STEP 10..... 16
- EXERCISE INSTRUCTIONS 16
- MAINTENANCE 18
- ENVIRONMENT PROTECTION 18
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 18

SAFETY INSTRUCTIONS

- Thank you for purchasing this product. Please read the manual carefully before starting the **assembly** and before using the product. Keep this manual for future reference. In case of doubt, contact a specialist **service**.
- Before **finishing** the **assembly**, check all parts for completeness and integrity. Use only original spare parts and accessories. Do not make unauthorized product modifications.
- Assembly can be only done by an adult. Check that the product is properly assembled and firm before use. The device must function properly to avoid injury to the user. If the device is not working properly, it shows signs of damage or wear, stop using it immediately. Damaged or worn parts must be replaced immediately.
- Ask your doctor for help before starting an exercise program.
- Keep the away from children and pets.
- Always do warm up exercise before starting your exercise program.
- Read and follow all instructions and warnings.
- Place the device on a flat, clean, dry surface. Keep a safe distance from another object's min 0.6 m.
- Do not use outdoors.
- Do not modify the device.
- Check the if all bolts and nuts are tightened before each exercise. Do not use the product if it is damaged.
- Exercise reasonably and carefully, do not overextend your exercise. The movements must not be too steep to avoid injury to the user.
- Do not hold your breath during exercise.
- Exercise properly and adequately. High loads can lead to health complications.
- Keep clothing and body parts away from moving parts to prevent injury. Take appropriate sportswear including sports shoes.
- Take care of your health and initially choose a slower pace. The same is useful after a longer exercise break. Over time, you can work towards a more intense pace.
- Improper exercise or failure to observe safety precautions may result in serious injury or equipment damage. In case of doubt or uncertainty, contact a specialist service or dealer.
- Never exceed the stated weight limits.
- Pay attention to body signals. In case of negative physical reactions, immediately stop exercising and contact your doctor.
- **Category H:** for home use
- **Weight limit:** 150 kg
- **Weights:** 2x60 kg

PARTS LIST


No.	Name	Specifications	Qty.
1	Base		1
2	Guide rod		4
3	Bottom front frame		1
4	Rear frame		1
5	Rubber pad	ø60xø58xø26x25	4
6	Weight	4,5 kg	18
7	Weight select rod	45 kg	2
8	Weight top plate	3,5 kg	2
9	Vertical frame - front		1
10	Vertical frame - rear		1
11	Pulley holder		1
12	Hexagon bolt	M10x25	6
13	Washer	ø10	114
14	Hexagon bolt	M10x20	8
15	Carriage bolt	M10x90	14
16	Nut	M10	66
17	Washer	ø8	42
18	Hexagon bolt	M8x25	8
19	Pin	ø10x120	2
20	Hexagon bolt	M10x110	1
21	Backrest		3
22	Hexagon bolt	M8x85	7
23	Top frame		1
24	Guide bar top frame		2
25	Seat support rod		1
26	Seat rod		1
27	Arm holder		1
28	Arm		1
29	Kick leg frame		1
30	Cushion holder		1
31	Right arm		1
32	Left arm		1
33	Small handles		4
34	Plate		5
35	Plate		3

36	Nut	M8	2
37	Hexagon bolt	M8x65	7
38	Axle for kick leg frame		1
39	Hexagon bolt	M10x20	4
40	Hexagon bolt	M12x25	10
41	Washer	ø12	144
42	Carriage bolt	M10x70	10
43	Big washer	ø25x ø16,5 ø2,0	2
44	Nut	M16	2
45	Double headed bolt	M10x ø15,8x262	1
46	Double headed bolt	M10x ø15,8x262	1
47	Seat		2
48	Backrest		1
49	Hexagon bolt	M8x20	14
50	Bend frame		1
51	Footrest		1
52	Right handle		1
53	Left handle		1
54	Seat support rod		1
55	Seat rod		1
56	Handles		2
57	Armrest	350x150x50	2
58	Armrest	400x220x50	1
59	Hexagon bolt	M8x80	2
60	Frame base		1
61	Seat rod support		1
62	Footrest rod support		1
63	Seat rod		1
64	Frame with twist waist		1
65	Frame with handlebars		1
66	Rear connection frame		1
67	Front connection frame		1
68	Footrest holder		1
69	Footrest		1
70	Backrest support frame		1
71	Left handle		1
72	Right handle		1
73	Axle	M12x ø20x174	2

74	Axle	M12x \varnothing 20x87	2
75	Hexagon bolt	M12x40	4
76	Hexagon bolt	M10x70	2
77	Hexagon bolt	M8x40	2
78	End cap	M12	8
79	Pulley	\varnothing 92	28
80	Pulley frame		1
81	Hexagon bolt	M10x45	27
82	Pulley axle	M10x180	1
83	Cable	2680 mm	1
84	Hook		4
85	7 section chain		1
86	Large handlebar		1
87	Triangular bracket		2
88	Cable	1025 mm	1
89	Pulley frame		2
90	Cable	4980 mm	1
91	9 section chain		1
92	Handle		1
93	Cable	2450 mm	1
94	Pulley frame		1
95	Pulley bracket		2
96	4 section chain		1
97	Cable	7000 mm	1
98	Left cover		2
99	Right cover		2
100	Foam roller rod		2
101	Foam roller		4
102	End cap		4

ASSEMBLY

STEP 1

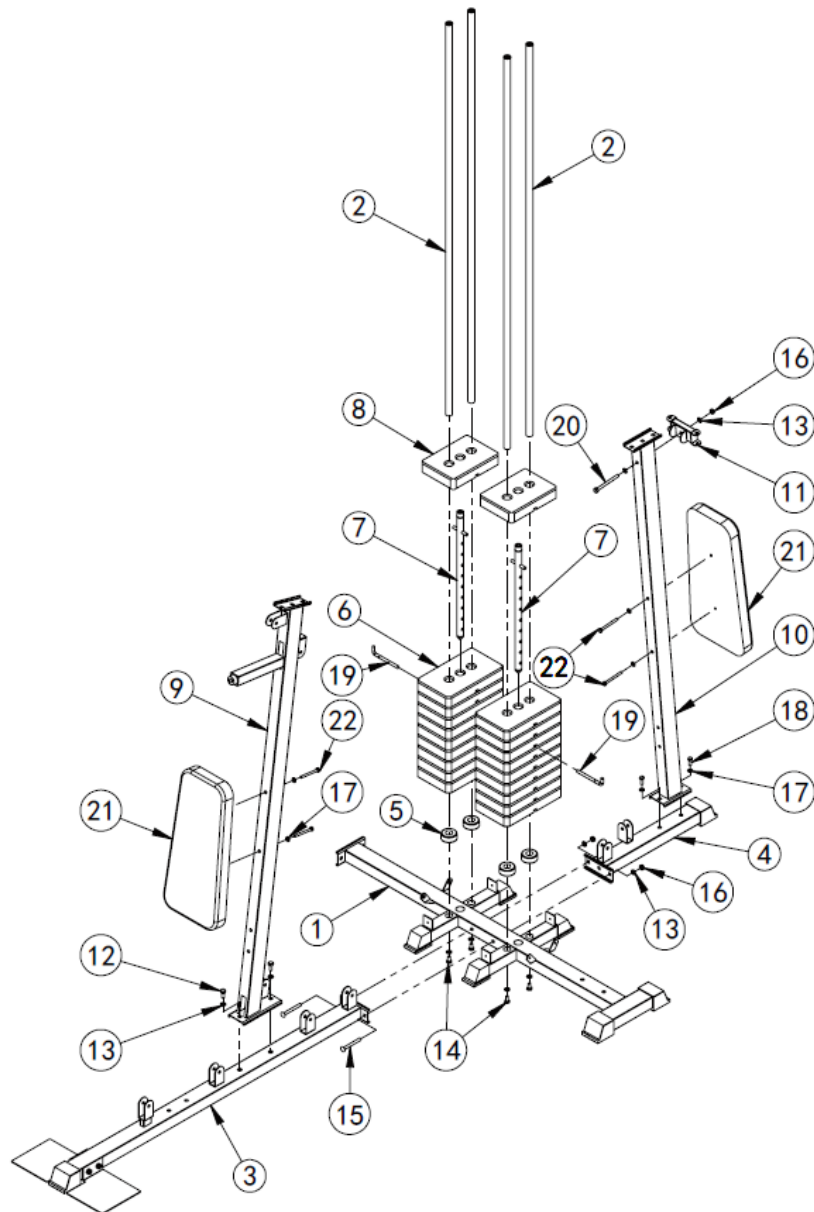

Attach the guide rods (2) to the base (1) using 4x bolts (14) and 4x washers (13).

Connect the frame (3) and frame (4) through the frame (1) with 2 x bolts (15), washers (13) and nuts (16).


Slide the weights as shown. First insert the rubber pads (5), then the weights (6) with the weight select bar (7) and put the top part of the weight (8). Use the pin (19) to select the load.

Attach the vertical frame (9) to the frame (3) with bolts (12) and washers (13). Attach the support (21) to the vertical frame (9) with the bolts (22) and washers (17).

Attach the vertical frame (10) to the frame (4) with bolts (18) and washers (17). Attach the support (21) to the frame (10) with bolts (22) and washers (17).

Attach the pulley bracket (11) to the frame (10) with bolts (20), washers (13) and nut (16).

STEP 2

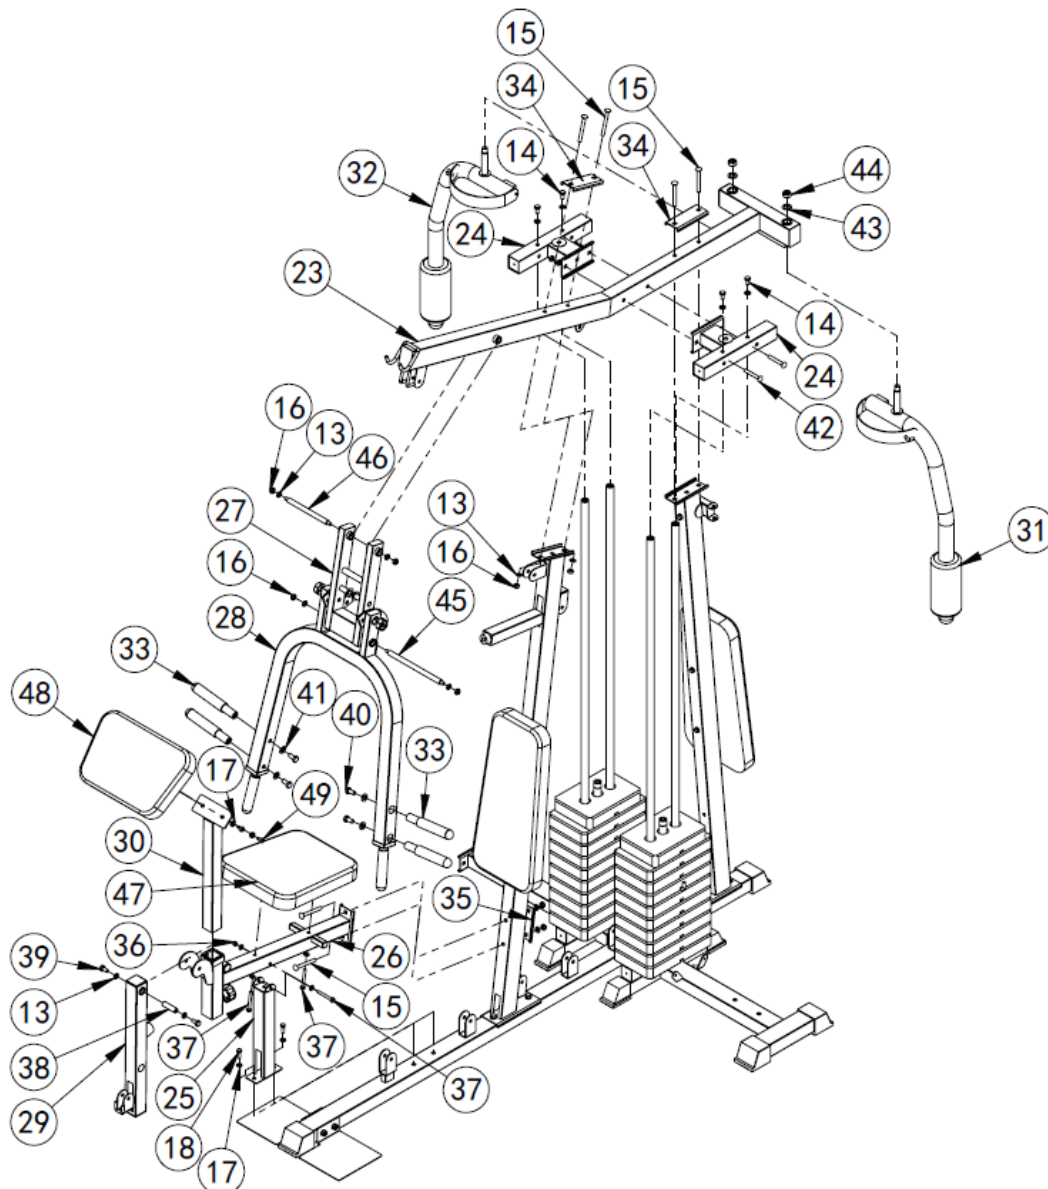


Attach the frame (24) to the frame (23) with 2x bolts (42), 2x washers (13) and 2x nuts (16). Then attach the frame (23) to the frames (9 and 10) with 4x bolts (15), 4x washers (13), 4x nuts (16) and 2x plates (34). Connect the frame (24) to the guide rods (2) using 4x bolts (14) and 4x washers (13). Attach the right and left arms (31 and 32) to the frame (23) using 2 x washers (43) and 2 nuts (44).

Attach the handles (33) to the arm (28) with 4x bolts (40) and 4x washers (41). Then connect the arm (28) and the arm bracket (27) with the bolts (45), 2 washers (13) and 2 nuts (16). Then attach the construction (28 + 27) to the arm bracket (27) and then connect to the upper frame (23) with the bolt (46), 2x washers (13), 2x nuts (16).

Attach the seat rod bracket (25) to the front base frame (3) with the bolt (18) and 2 washers (17). Fasten the seat bar (26) to the frame (9) with the plate (35), 2x screws (15), 2x washers (13) and 2x nuts (16). Then attach the saddle bar (26) to the saddle bar bracket (25) with the bolt (37), 2x washers (17) and 1x nut (36). Finally, attach the seat (47) to the seat bar (26) with 2x bolts (37) and washer (17).

Attach the kick leg frame (29) to the seat bar (26) with the bolt (39), 2x washers (13) and the axle (38). Remove the rod (30) attached to the seat rod (26). Attach the support (48) to the rod (30) with 2x screws (49) and 2x washers (17). Then reinsert the rod and secure it to the seat rod.

STEP 3

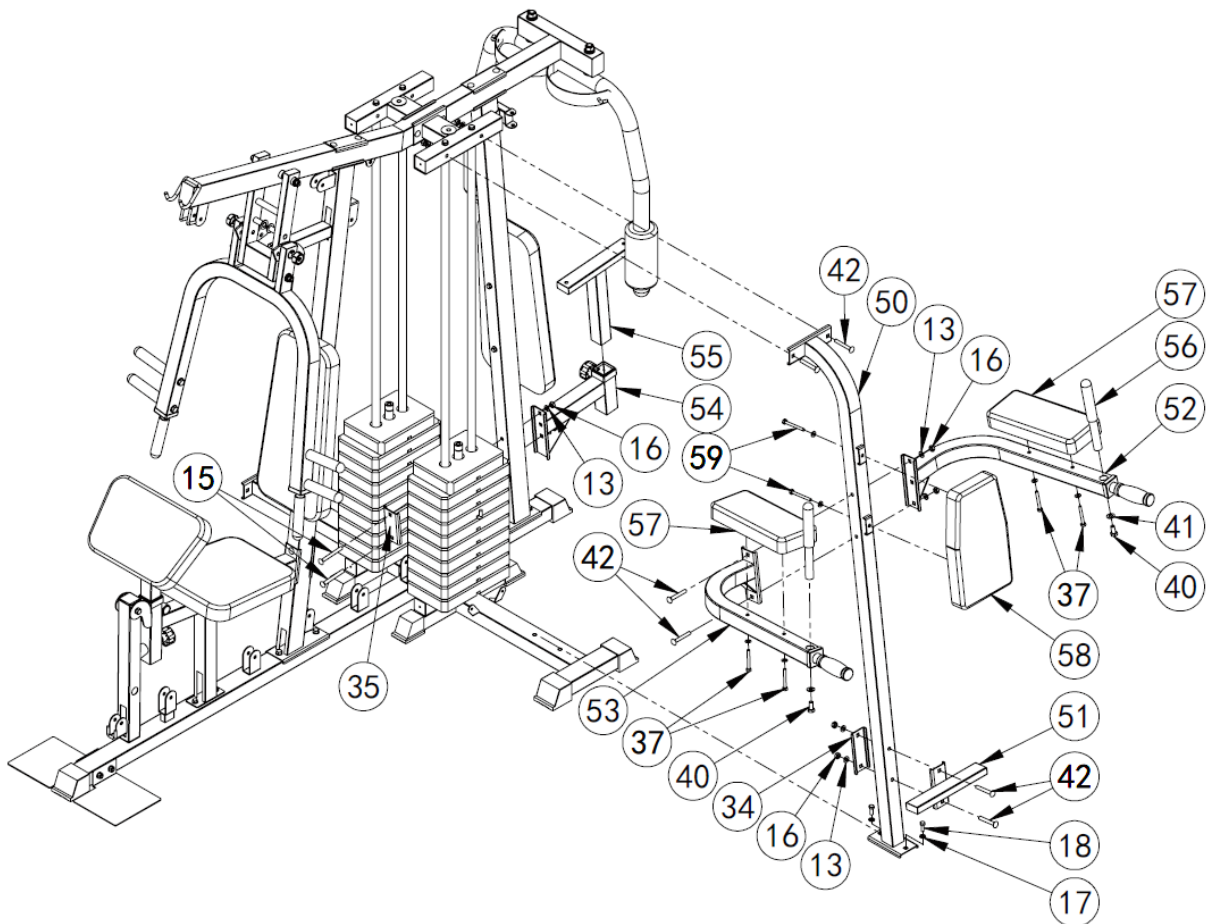


Connect the bent frame (50) to the base (1) with 2x bolts (18), 2x washers (17). On the top part, attach the bent frame (50) to the frame (24) with 2x bolts (42), 2x washers (13) and 2x nuts (16).

Attach the right and left handrails (52 and 53) to the bent frame (50) with 2x bolts, 2x washers (13) and 2x nuts (16). Attach the handles (56) to the handrails (52 and 53) with 2x bolts (40) and 2x washers (41). Attach the armrests (57) to the handles (52 and 53) with 4x bolts (37), 8x washers (17).

Attach the footrest (51) to the frame (50) with 2x bolts (42), plate (34), 2x washers (13) and 2x nuts (16). Attach the headrest (58) to the frame (50) with 2x bolts (59) and 2x washers (17).

Attach the saddle post bracket (54) to the rear frame (10) with 2x bolts (15), plate (35), 2x washers (13) and 2 nuts (16). Slide and secure the seat post (55) into the seat rod bracket (54).

STEP 4

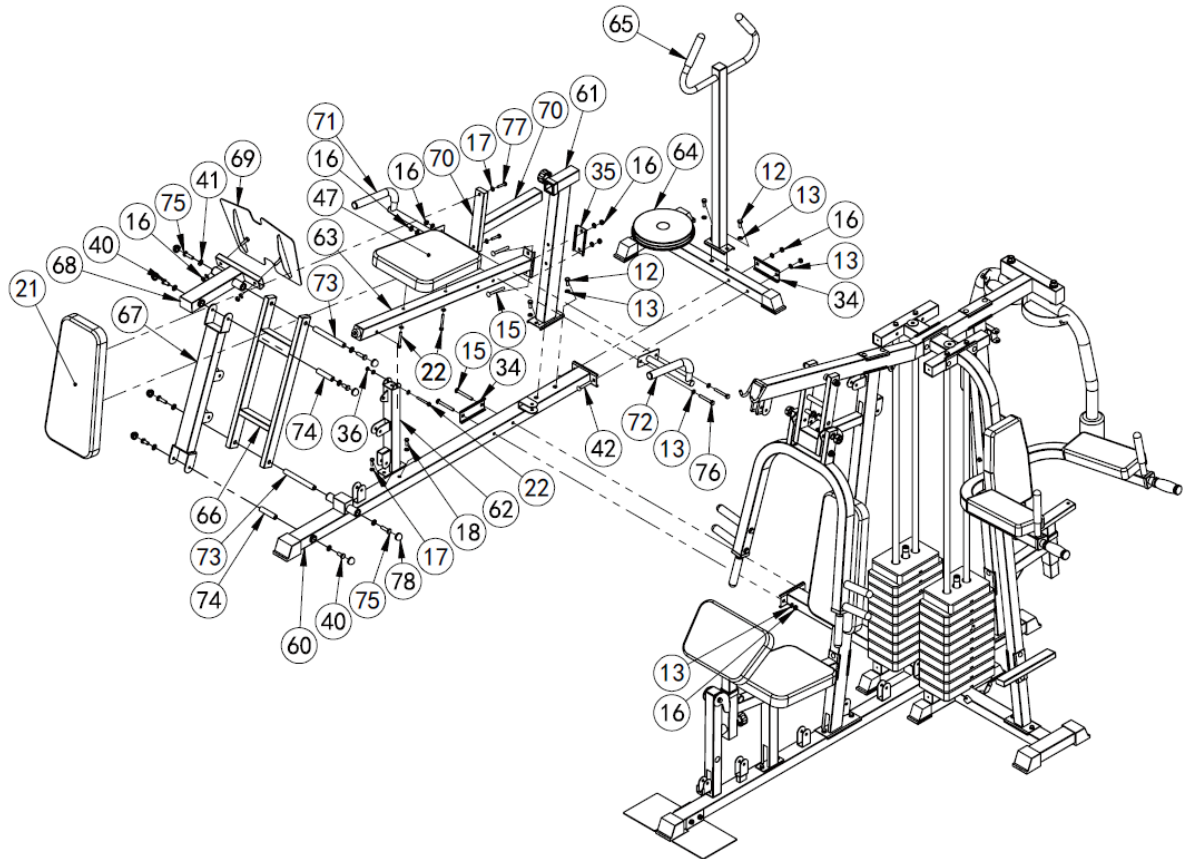


Attach the frame (60) to the base (1) with 2x bolts (15), plate (34), 2x washers (13) and 2x nuts (16).

Attach the foot support bracket (62) to the frame (60) with 2x bolts (18) and 2x washers (17). Attach the saddle post bracket (61) to the frame (60) with 2x bolts (12) and 2x washers (13). Attach the saddle bar (63) to the saddle bar bracket (61) with 2x bolts (15), plate (35), 2x washers (13) and 2x nuts. Attach the handles (71 and 72) to the seat bar (63) with 2x bolts (76), 4x washers (13) and 2x nuts (16). Slide the headrest rod (70) into the seat post bracket (61) and attach the headrest (21) to the headrest rod (70) using 2x bolts (77), 2x washers (17). Attach the seat (47) to the saddle post (63) with the screws (22) and 2x washers (17).

Attach the frame (67) to the frame (60) with 2x bolts (40), 2x washers (41), axes (74), 2x black end pieces (78). Attach the footrest bracket (68) to the frame (67) with 2x bolts (40), 2x washers (41), axle (74) and 2x terminals (78). Attach the frame (66) to the frame (68) with 2x bolts (75), 2x washers (41), axle (73) and 2x terminals (78). Attach the frame (66) to the frame (60) with 2x bolts (75), 2x washers (41), axes (73) and 2x terminals (78). Attach the footrest (69) to the bracket (68) using 2x washers (13) and 2x nuts (16).


Attach the rotary disk frame (64) to the frame (60) with 2x bolts (42), plate (34), 2x washers (13) and 2x nuts (16). Attach the handles (65) to the rotary disk frame (64) with 2 screws (12) and 2 washers (13).

STEP 5

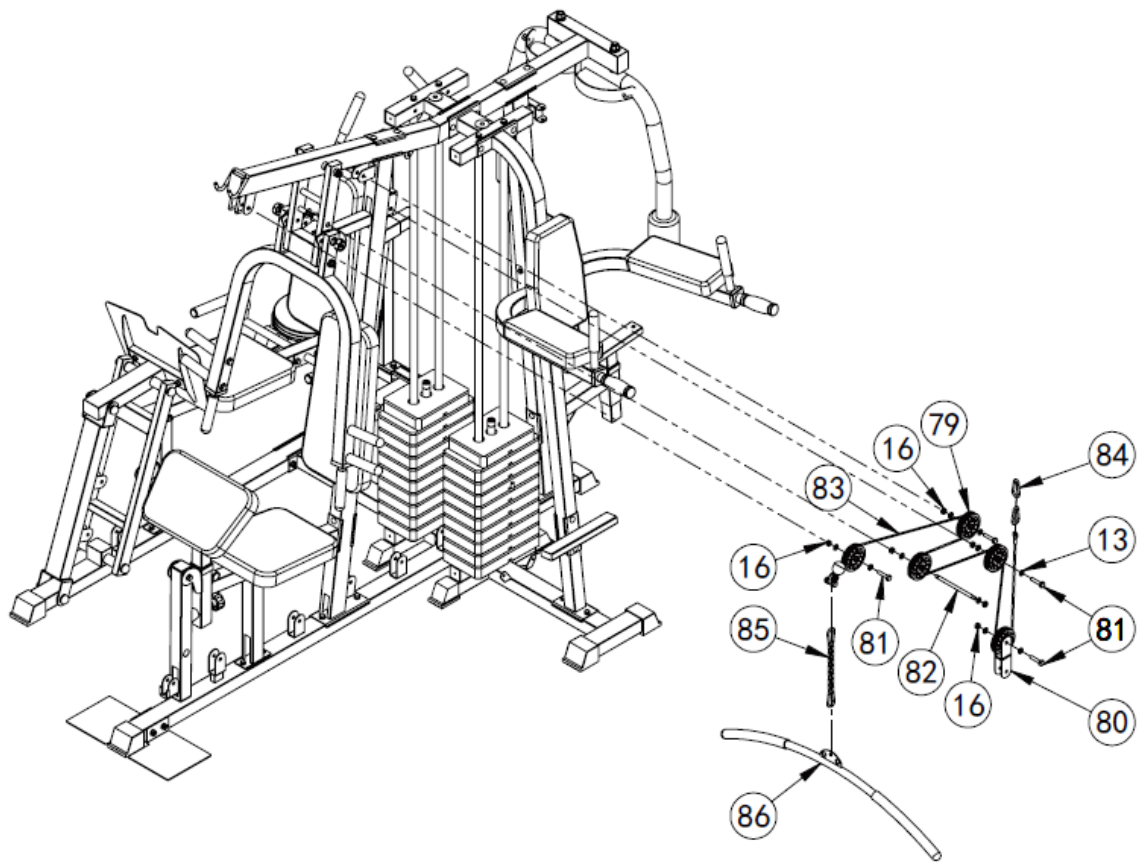


Attach 5x pulleys (79) with 4x screws (81), 10x washers (13), 6x nuts (16), 1x pulley frame (80) and axle (82) as shown. Pull the cable (83) between the pulleys as shown. Attach the cable (83) to the frame at one end with the carabiner (84) and to the ball end with the carabiner (84), chain (85) and handles (86).

STEP 6

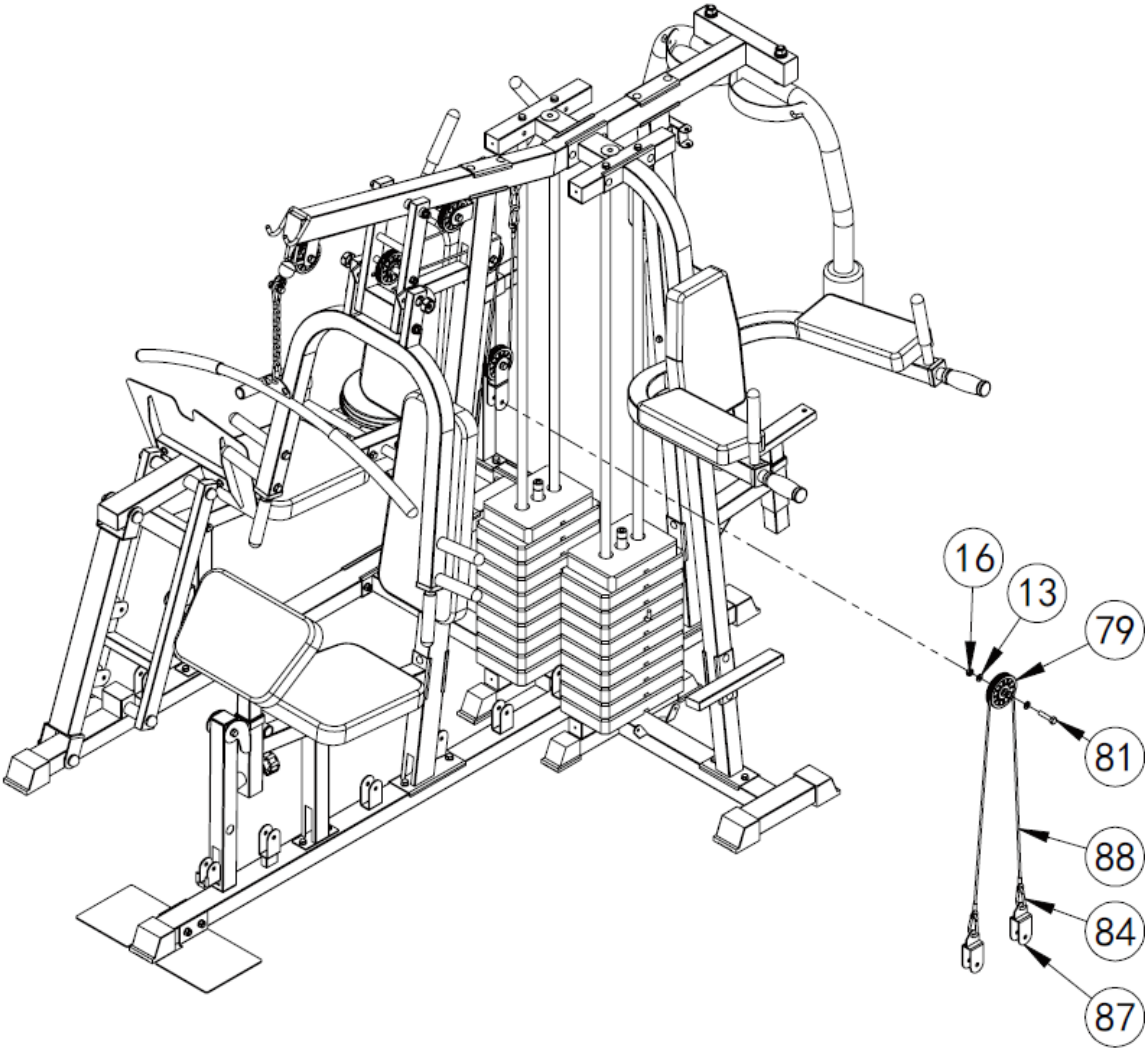


Attach the pulley (79) with the bolt (81), 2x washers (13) and the nut (16) as shown. Thread the cable (88) and secure the triangular clips (87) with the carabiner (84).

STEP 7

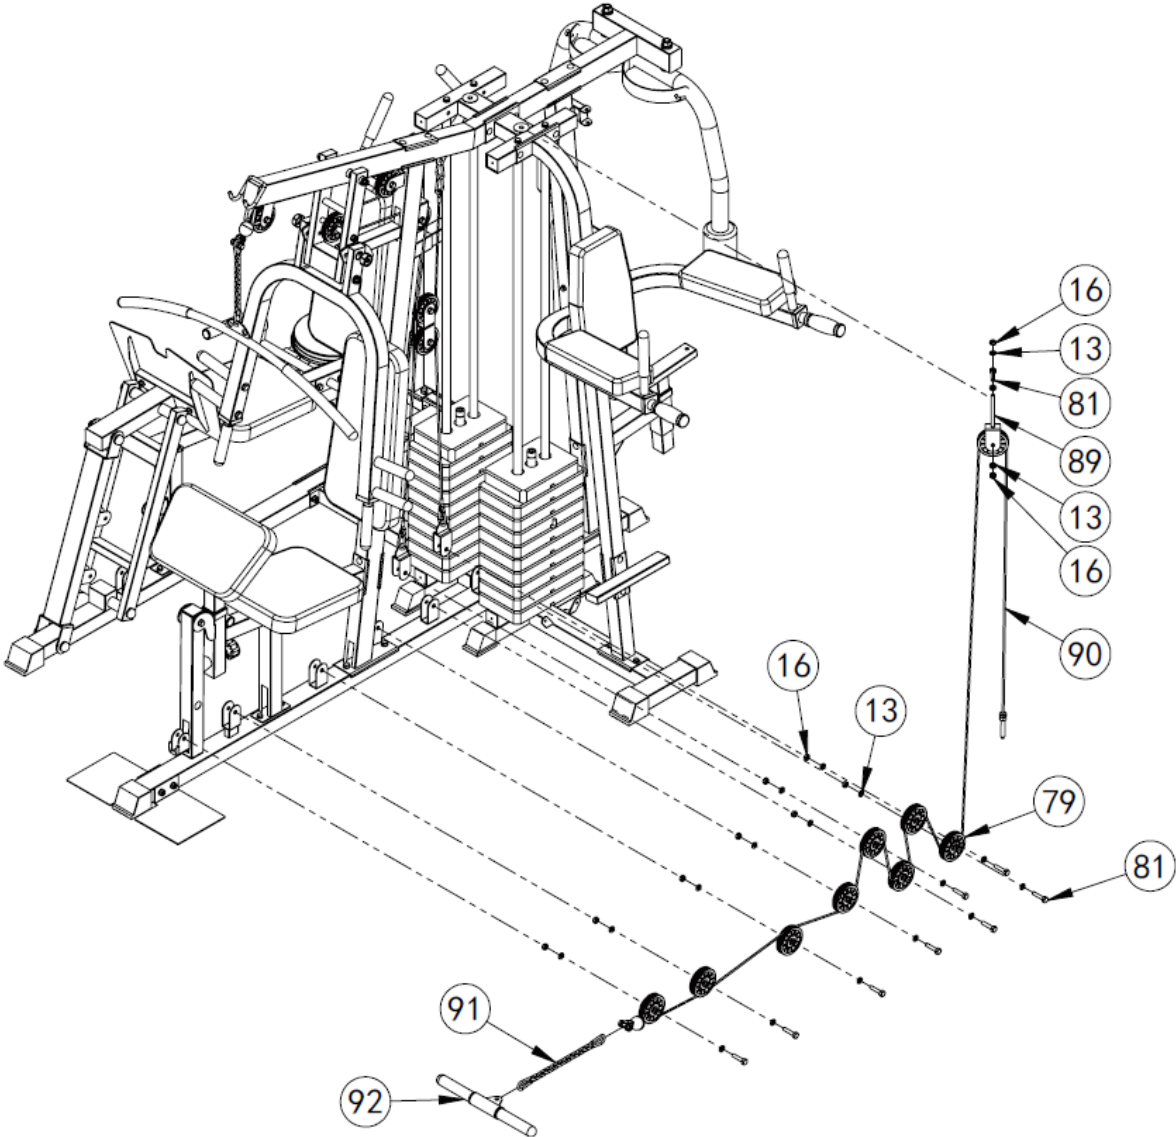


Attach the pulleys (79) to the frame with 9x bolts (81), 19x washers (13), 9x nuts (16) and the pulley frame (89) as shown. Guide the cable (90) as shown and attach the chain (91) and the handle (92) to the ball end.

STEP 8

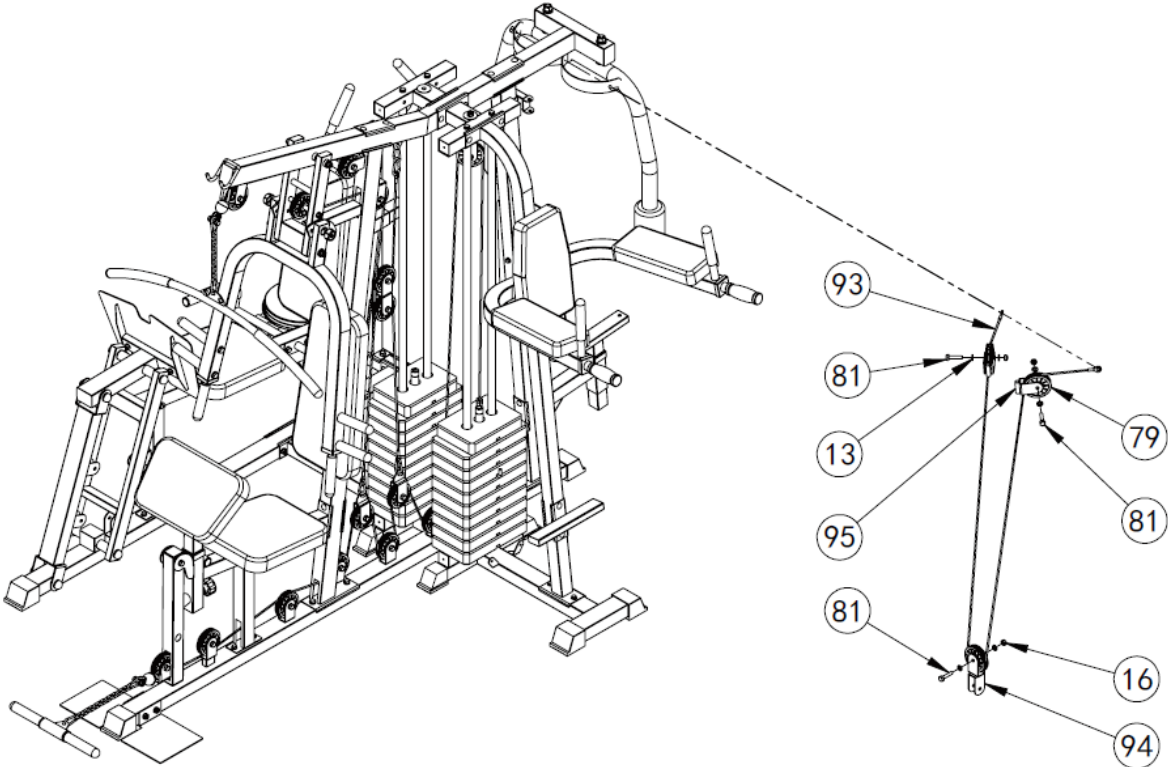


Attach the pulleys (79) with 3x bolts (81), 6x washers (13), 3x nuts (16) and pulley bracket (94 and 95) as shown. Guide the cable (93) as shown.

STEP 9

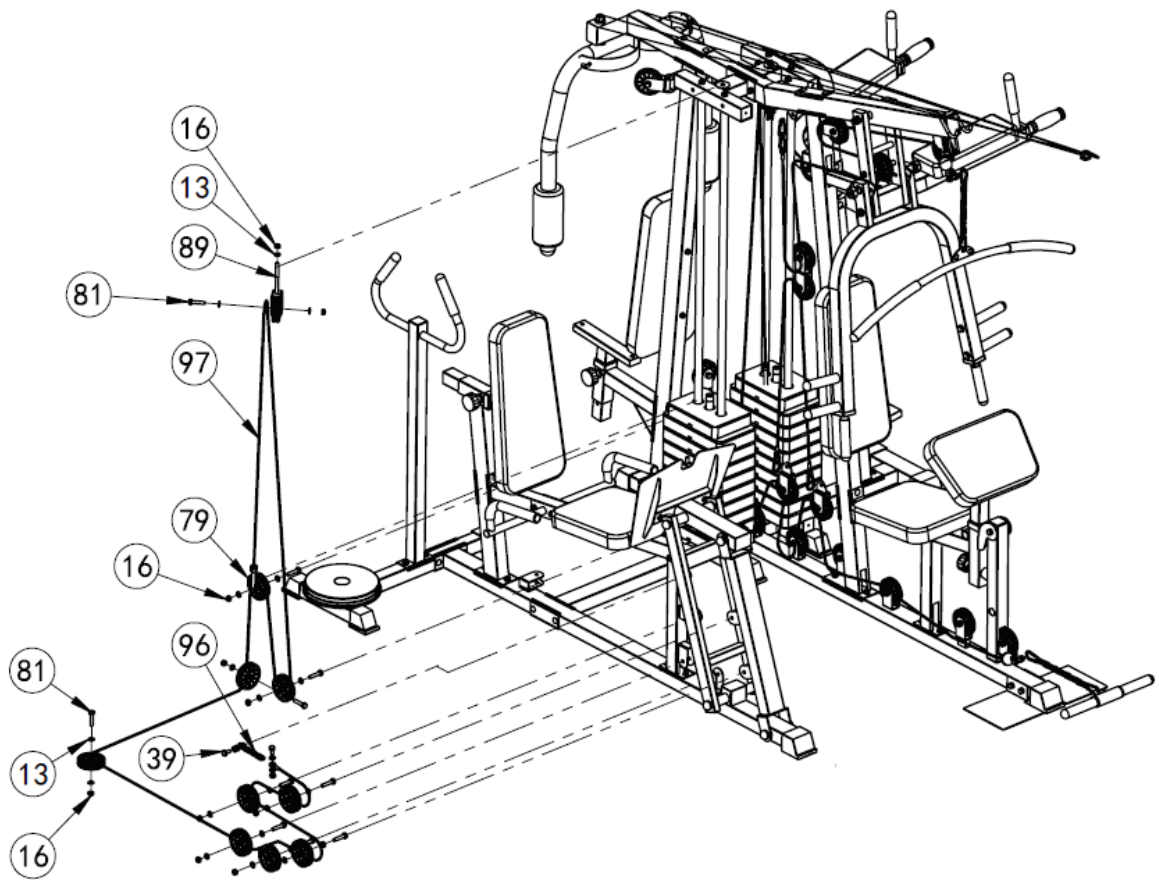

Secure the pulleys (79) with 10 bolts (81), 25x washers (13), 13x nuts (16) and a pulley bracket (89). Attach the cable (97) with 2 screws (93) and the chain (96) as shown.

STEP 10

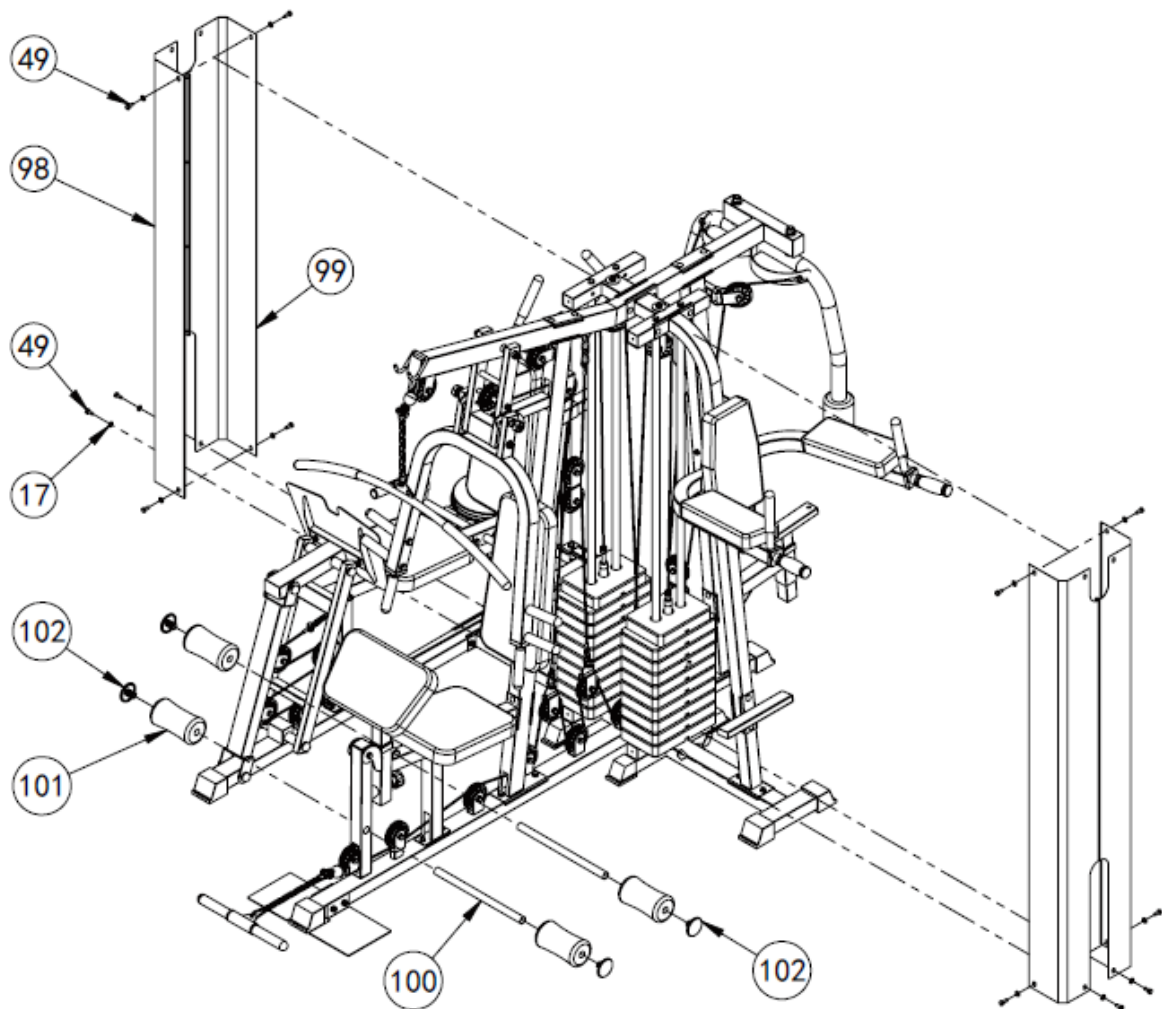

Attach the right and left covers (98, 99) to the frame using 12x screws (49) and 12x washers (17).


Attach 2x foam roller rod (100) and 4x foam rollers (101) and 4x end pieces (102) to the rods.

EXERCISE INSTRUCTIONS

Exercise is beneficial to your health, improves physical condition, shapes muscles and, in combination with a calorie-balanced diet, leads to weight loss.


1. WARM UP

This phase serves to improve the blood circulation of the whole body and to warm up the muscles, to reduce the risk of convulsions and muscle injury. We recommend performing the stretching exercises below. When dragging, stay in the end position for approximately 30 seconds, do not make sudden movements and do not vibrate.

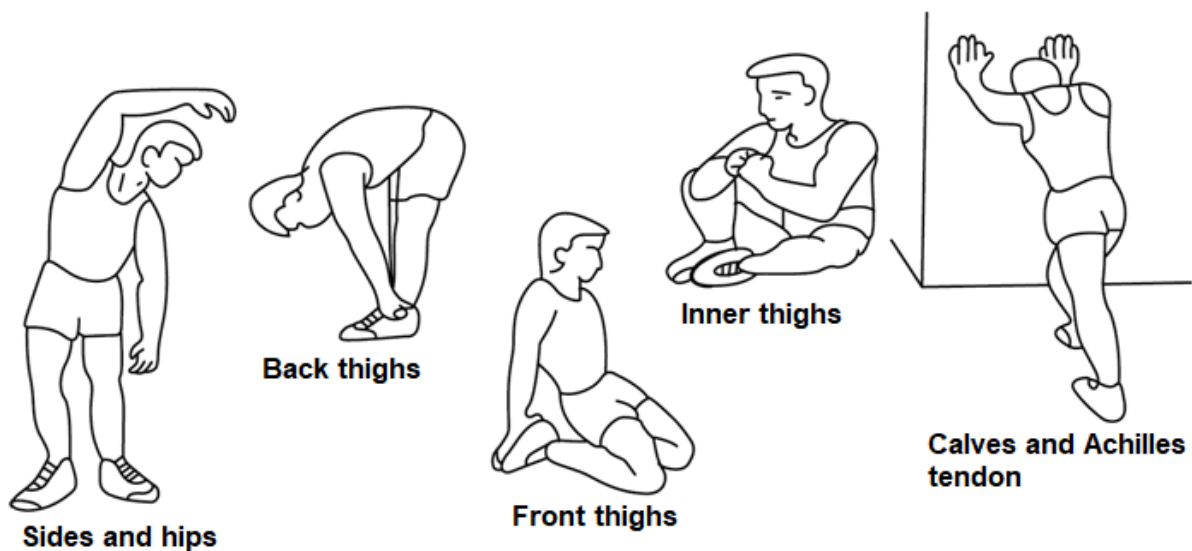

2. EXERCISING

This phase is the most physically demanding part. Regular exercise strengthens the muscles. You can determine the tempo yourself, but it is very important that it is the same throughout the exercise. Heart rate should be within the target zone (see figure below).

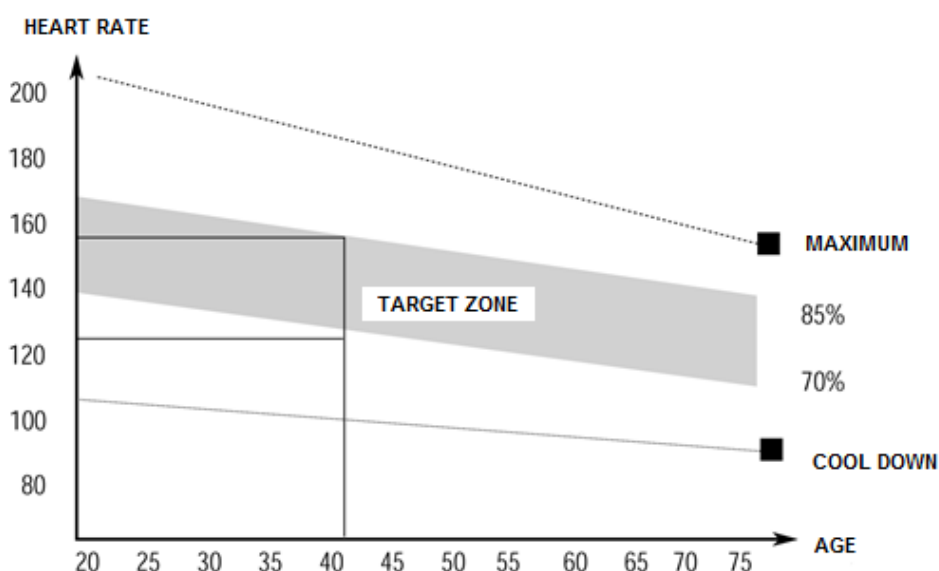

This phase should last at least 12 minutes. Most people exercise for 15-20 minutes.

3. COOLDOWN

This phase serves to soothe the cardiovascular system and relax the muscles. It should take approximately 5 minutes. You can repeat warming up exercises or continue exercising at slower pace. Stretching your muscles after exercise is extremely important - you need to avoid sudden movements and vibrations.

With improved fitness, you can lengthen and increase exercise intensity. Train regularly, at least three times a week.

SHAPING MUSCLES

For muscle shaping, it is important to set a high load. The muscles will be more stressed, which may cause that you will not be able to exercise as long as usual. If you are trying to improve your condition at the same time, you need to adjust your training. Exercise in the usual way during the warm-up and final stages of training but increase the resistance of the device at the end of the exercise. You may need to slow down the speed to keep the heart rate in the target area.

WEIGHT LOSS

The number of calories burned depends on the length and intensity of the exercise. The essence is the same as in fitness exercise, but the goal is different.

MAINTENANCE

1. After exercising, wipe off any sweat to avoid corrosion. Clean the device with a soft cloth and mild detergents. Do not use abrasive cleaners or solvents on plastic parts.
2. In case of increased machine noise, all bolts and joints must be checked and tightened properly.
3. The product must be placed in clean, ventilated and dry areas.
4. Do not expose the device to direct sunlight.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ
SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

Phone: +420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk