 




USER MANUAL – EN

IN 23662 Massage chair inSPORTline Carlita

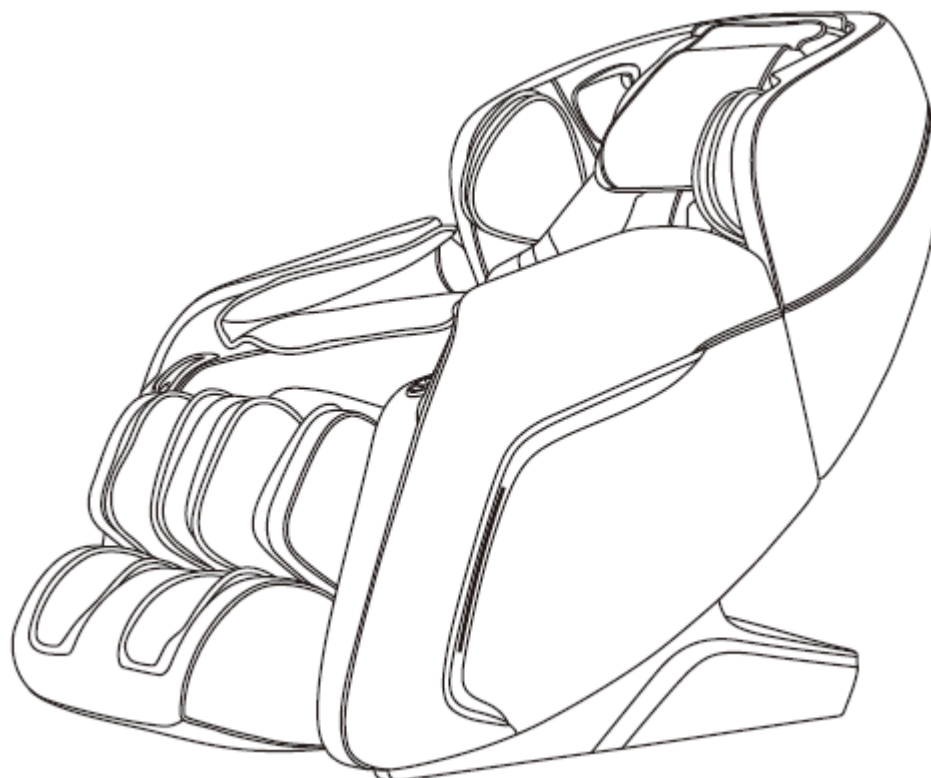

CONTENTS

- SAFETY INSTRUCTIONS..... 3
- WARNING 5
- PRODUCT DESCRIPTION 6
- FUNCTION 7
- CONTROLLER 8
- USE 9
 - CONNECTION..... 9
 - STARTING THE MASSAGE..... 9
 - AUTOMATIC MASSAGE 10
 - MANUAL MASSAGE OF THE UPPER BODY 11
 - AIR MASSAGE 12
 - FOOT ROLLERS 12
 - HEATING 12
 - ANGLE ADJUSTMENT..... 13
 - OTHER..... 13
 - LEFT SIDE BUTTONS..... 13
 - RIGHT SIDE..... 14
- VOICE CONTROL..... 14
- BLUETOOTH..... 15
- SWITCH OFF 15
- LEG REST ATTACHMENT 15
 - PILLOWS 16
- FLOOR PROTECTION..... 16
- TRANSPORT..... 16
- SPECIFICATIONS..... 17
- ENVIRONMENT PROTECTION 17
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 17

SAFETY INSTRUCTIONS

IMPORTANT SAFETY WARNINGS

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Kids can move around this product only under adult supervision.
- Use only well-grounded socket and proper power cord.
- Pull out the plug after every use or during maintenance to avoid injury or damaging the product.
- Please use this product according to the manual.
- Do not use unauthorized modifications or accessories.
- Only for indoor use.
- Before first use, please read the manual carefully.
- Use this product as is described in the manual.
- Recommended maximum use time is 20 minutes.
- Do not use the device if it is damaged. (frame, leather etc.)
- Do not use the chair if the ventilation is blocked.
- No not put on chair heavy items or objects with sharp edge.
- Do not fall asleep during massage for safety reasons.
- Do not use the chair after you consumed alcohol or other drugs or if you are sick or dizzy.
- Do not use within one hour after meal.
- Please be caution and do not use too strong massage.
- Weight limit: 150 kg

POSITION OF MASSAGE CHAIR

- Do not use the chair in high temperatures or moist environments (e.g. bathroom).
- Do not use the chair immediately after temperature change.
- Do not use in dust or impropriety rooms.
- In is important to secure enough space and ventilation.

PEOPLE THAT SOULD NOT USE THE PRODUCT

- People suffering from osteoporosis.
- People who have hearth problems or are using electronic medical equipment (e.g. peacemaker).
- People suffering fever.
- Pregnant women.
- People suffering skin diseases.
- Kids younger 14 years old or people suffering mental illness can use this product only under adult supervision.
- People that are recommended rest from the doctor or people suffering from sickness.
- Do not use this chair if you have wet body.
- Do not use the heat function if you are heat sensitive.

SAFETY

 
- Maintenance should be done only by qualified person. User should not disassemble the chair or do the maintenance by themselves.
- After every use unplug the cord.
- Do not use the product if the power cord, plug or socket are damaged.
- If you are not using the chair for long period of time, store it at a clean and dry place and secure the power cord.
- Do not expose the chair to high temperatures, direct sunlight and do not place the chair near heat source.
- If the power cord, plug or socket are damaged, ask professional or qualified person for help.
- For cleaning use wet sponge only. Do not use thinner, gasoline or alcohol for cleaning.
- Mechanical parts are assembled and made to require minimum maintenance.
- Pay extra attention to not damage the chair with sharp objects.
- Do not push the chair on uneven ground, always pick the chair up and then move.
- Do not let the chair to work for long periods of time.

COMMON PROBLEMS AND SOLUTIONS


- It is common that the motor is making sounds.
- If the chair is not working, please check the power cord, plug and socket and that the switch is ON.
- After the massage time is over the massage chair will turn OFF. The product will automatically shut down if it is overheated – wait at least half an hour before next massage.

WARNING


If the footrest rises, do not apply pressure to the footrest. You may damage the product or injure yourself.

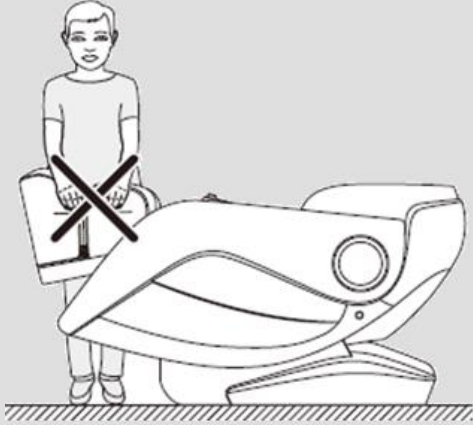

 
Before sitting down, make sure that the massage heads do not protrude from the seat. You may damage the heads or be injured.

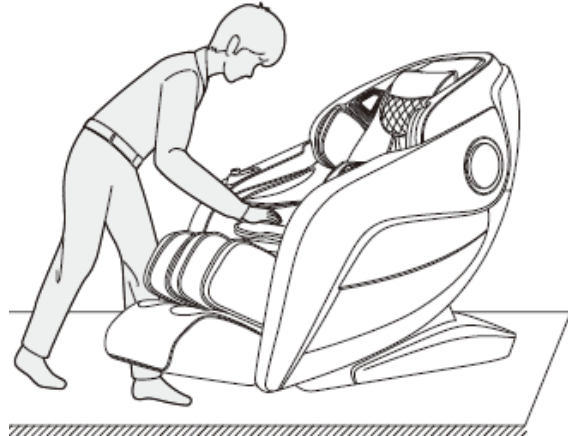

 
Never unplug the power cord during use or when the chair is in standby mode. After use, we recommend switching off the chair and unplugging the power cord.

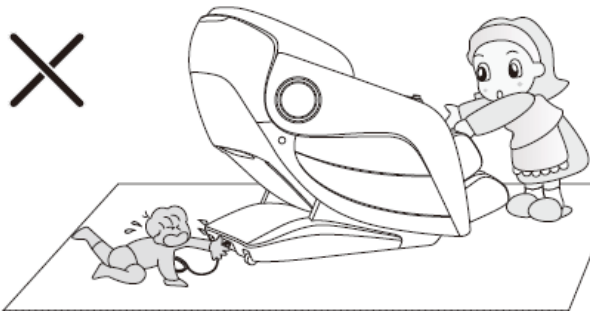

 
Before using the angle adjustment function, make sure that you have enough free space and that there are no other people or pets behind the chair.

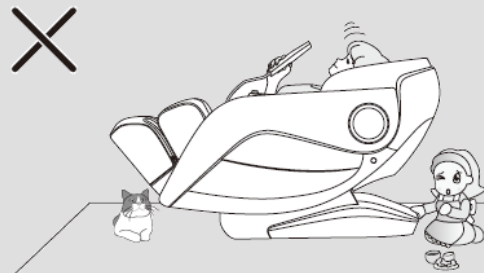

PRODUCT DESCRIPTION

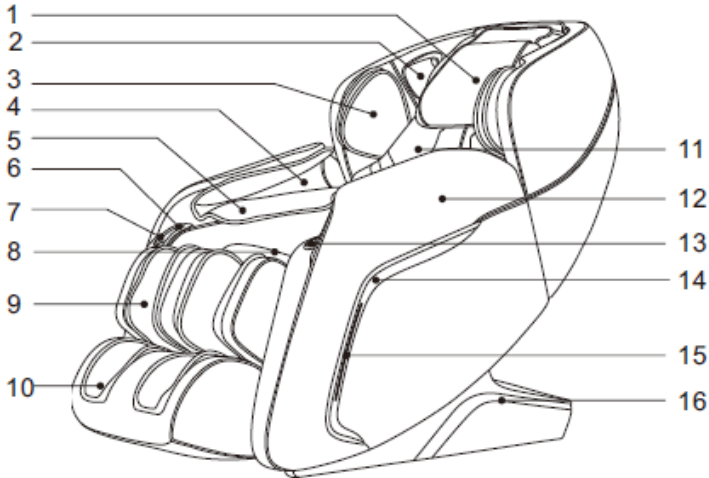 

 - 1. Pillow
- 2. 3D digital speakers with voice control on the right
- 3. Air cushions for upper arms
- 4. Air cushions by hand
- 5. Massage magnetic tapes
- 6. Driver holder
- 7. USB charging port
- 8. Seat
- 9. Leg rest
- 10. Foot massage
- 11. Backrest
- 12. Armrest
- 13. Quick control
- 14. Backrest cover
- 15. Backlight
- 16. Side cover

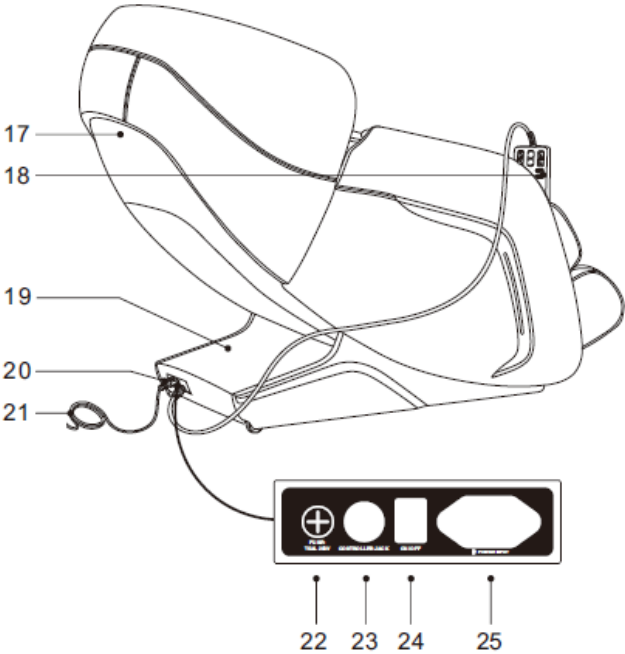


- 17. Back cover
- 18. Controller
- 19. Drive cover
- 20. Wheels
- 21. Power cord and plug
- 22. Fuses
- 23. Driver cable
- 24. Switch
- 25. Power hole

FUNCTION

- The massage chair contains massage heads powered by four-wheel drive that move up and down with quiet operation.
- 5 types of massages: fingers, kneading, tapping, knocking, and kneading.
- Automatic arm detection.
- 12 types of preset automatic massages: comfortable, relaxing, traction, shoulders and neck, back and waist, full body, vertebral, recovery, stretching, collateral activation, buttocks massage, soothing, total air cushion massage.
- Manual massage: full body, fixative, selective; 5 speed settings. You can adjust the position up and down during the fixed massage; you can adjust the width while knocking, pushing, or tapping.
- Air massage: 3 modes and 3 levels of intensity selection; body pressure, arm pressure, leg pressure.
- Foot massage using rollers.
- Adjustable footrests.
- Back heating with carbon fibers.
- Backrest on the rail, which reduces the required space when tilting.
- Ergonomic backrest.
- Play music through Bluetooth speakers.
- Voice control.
- There are 5 buttons on the left back for quick control.
- Massage and magnetic palm massage.
- There is a USB charging port on the right side of the handle.
- Backlight.
- Controller with LCD color display.
- Automatic shutdown.

 CONTROLLER

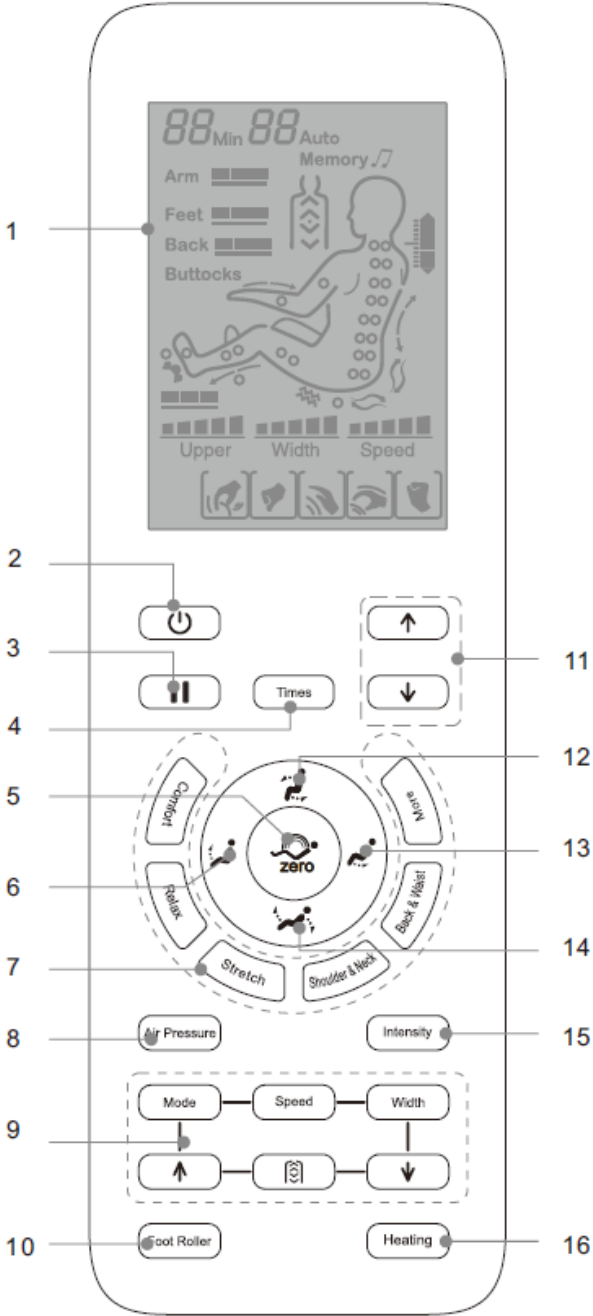

- 1. LCD display
- 2. Switch
- 3. Pause / start
- 4. Timer
- 5. Automatic incline
- 6. Lifting the footrest
- 7. Automatic massage
- 8. Air cushions
- 9. Buttons for manual operation
- 10. Massage foot rollers
- 11. Adjusting the position of the shoulders
- 12. Navigation key up
- 13. Lowering the footrest
- 14. Lowering the backrest
- 15. Adjusting the intensity of the massage pads
- 16. Heating

USE

CONNECTION







Connection

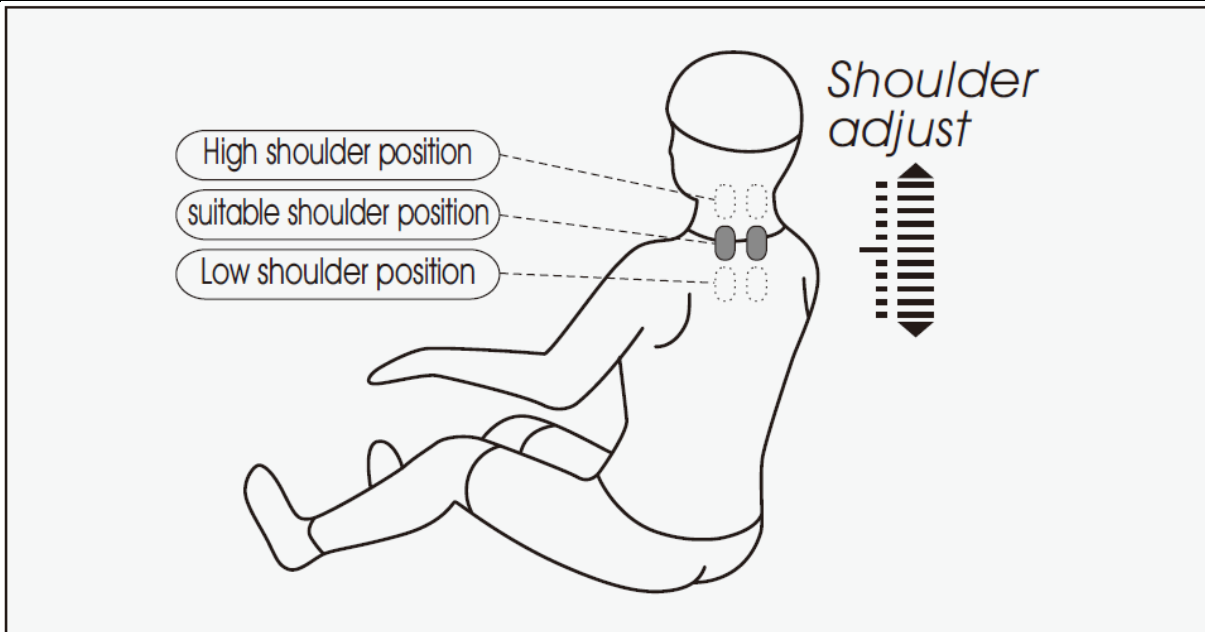 


Diagram of power supply and fuses

STARTING THE MASSAGE

 
 

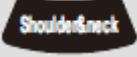
 
 
1. Press the power button, the default massage setting is comfort.
2. The massage chair automatically adjusts the position of the shoulders.
3. Automatic shoulder detection starts, be seated correctly.
4. If the position of the arms is detected incorrectly, you can move the position of the heads manually up and down. You can choose between 10 positions, if the change is not made within 10 seconds, the massage will start automatically.

Button	Description	Display
	Move the massage heads up.	
	Move the massage heads down.	
















During **shoulder** detection, an audible signal sounds, during which you can adjust the position of the heads. You can also choose one of 12 preset massages: comfortable, relaxing, traction, shoulders and neck, back and waist, full body, vertebral, recovery, stretching, collateral activation, buttocks massage, soothing, total air cushion massage.









AUTOMATIC MASSAGE

Button	Description	Display
 Comfort	Comfortable massage	F1 Auto
 Relax	Relaxing massage	F2 Auto
 Stretch	The backrest and frame will slowly incline and decline, massaging with air cushions	F3 Auto
 Shoulder & neck	Neck and shoulder massage	F4 Auto
 Back & waist	Back and waist massage	F5 Auto
 More	Total body massage	A1 Auto
	Chiropractic massage	A2 Auto
	Recovery massage	A3 Auto
	Meridian massage	A4 Auto
	Buttocks and thighs massage	A5 Auto
	Soothing massage for better sleep	A6 Auto
	Full body massage with air cushions	A7 Auto



MANUAL MASSAGE OF THE UPPER BODY

Function	Button	Massage settings	Display
Massage	Mode	Shiatsu: speed, width	
		Kneading: speed	
		Taping: speed, width	
		Kneading and tapping: speed	
		Knocking: speed and width	
Speed	Speed	5 speed options	
Width	Width	Width adjustment	
Back massage		Fixed massage	
		Selective massage - small	
		Selective massage - large	
		 	Message head adjustment



AIR MASSAGE

Function	Button	Description	Display
Type		Total massage: setting of total arm and leg massage	Arm  Feet 
		Arm: arm massage setting	Arm 
Intensity		Legs: leg and foot massage settings	Feet 
		Three intensity levels	Arm  Feet 





FOOT ROLLERS

Function	Button	Description	Display
Foot rollers		Press to start or stop the roller massage, you can set weak, medium, and strong massage. To change the intensity, press the button repeatedly.	

HEATING

Function	Button	Description	Display
Pause / start		Press to pause or start the massage for up to 20 minutes, then the chair will turn off.	

ANGLE ADJUSTMENT


Function	Button	Description
Rise the backrest and lower the footrest		Hold the button, sound signal will sound, backrest will rise, and leg rest will lower
Lower the backrest and rise the footrest		Hold the button, sound signal will sound, backrest will lower, and leg rest will rise
Raise the leg rest		Hold the button, sound signal will sound, leg rest will rise, release to stop
Lower the leg rest		Hold the button, sound signal will sound, leg rest will lower, release to stop

Laying




Automatic laying position, 3 positions

OTHER

Function	Button	Description	Display
Timer		Press the button to add 5 min, the maximum operating time is 30 min, if you set a value higher than 30 min, the time will switch to the lowest value of 5 min.	<i>20min</i>

 LEFT SIDE BUTTONS

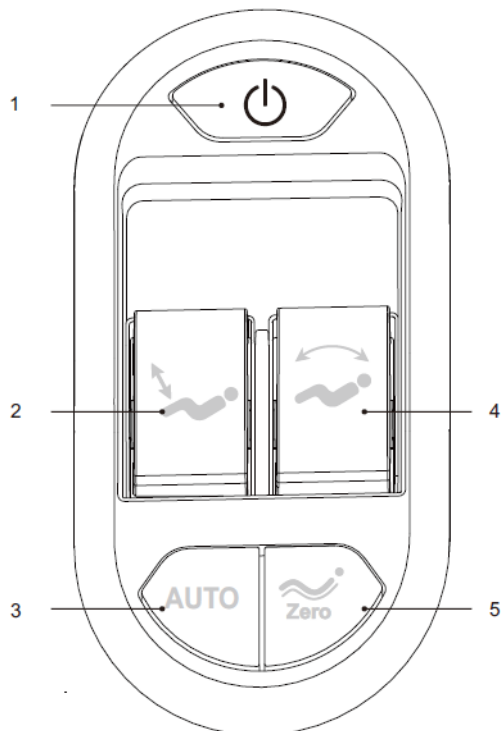





1. Switch

2. Changing the position of the leg rest


3. Automatic massage

4. Changing the position of the back and leg support

5. Laying

Function	Description
	Power: press to start or stop the massage
	Hold down the button to raise the backrest and lower the leg rest Hold down the button to lower the backrest and raise the leg rest
	Press to change the position of the rests to one of the 3 preset positions
	Hold up: raise the leg rest Hold down: lower the leg rest
AUTO	Press to automatically switch between automatic massages

 RIGHT SIDE

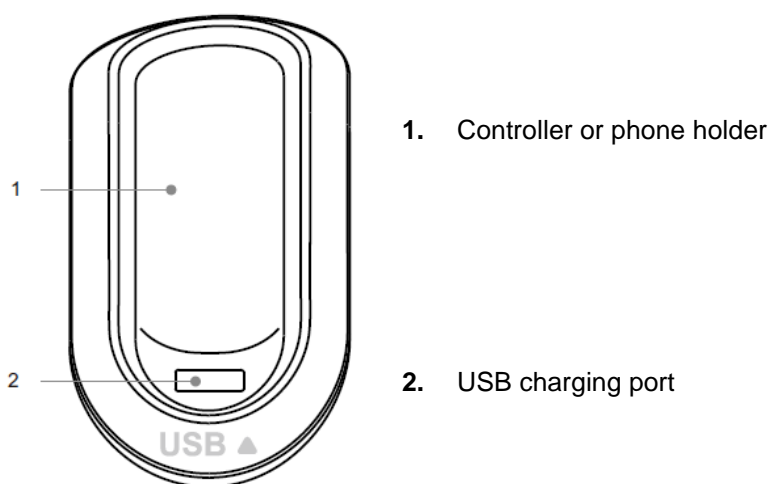

VOICE CONTROL

Voice control of the chair is in English only.

If the chair is turned on or in standby mode, say "Hi Alice" to start voice control. After starting the voice control, you have 6 seconds to enter the next command. After 6 seconds, the voice control switches off again.

No.	Command	Answer
1.	Massage on	ok, massage on.
2.	Massage close	ok, massage close
3.	Comfort Massage.	ok, comfort massage
4.	Relax massage.	ok, relax massage
5.	Full body massage.	ok, full body massage
6.	Neck and shoulder massage.	ok, Neck and shoulder massage
7.	Back and waist massage.	ok, back and waist massage
8.	Stretch massage.	ok, stretch massage
9.	Fixed massage.	ok, fixed massage
10.	Change the other mode.	ok, change the other mode

- | | | |
|-----|-------------------------|----------------------------|
| 11. | Go little down. | ok, go little down |
| 12. | Go little up. | ok, go little up |
| 13. | Open the air pressure. | ok, open the air pressure |
| 14. | Close the air pressure. | ok, close the air pressure |
| 15. | Up the seat position. | ok, up the seat position |
| 16. | Down the seat position. | ok, down the seat position |
| 17. | Stop adjustment. | ok, stop adjustment |

BLUETOOTH

Find your new device on your phone. The chair will be called IMCM-XXXX (X is the unique number of the chair). Pair the chair with your phone and you can play music from your phone.

SWITCH OFF

 
Switch off the chair, the rests return to their original positions. Unplug the chair.



LEG REST ATTACHMENT


Connect the cables and hoses and insert them so that you do not pinch them (Fig. 1).

Attach the leg rest to the bracket (Fig. 2).

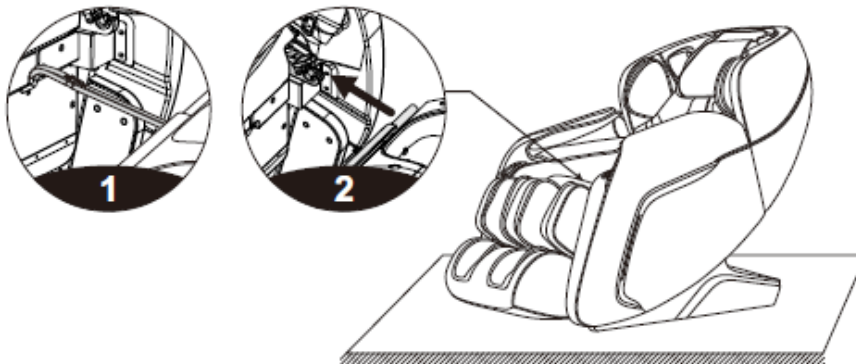


Attach the cover (Fig. 3).

 Attach the cover with the M4 screw (Fig. 4).

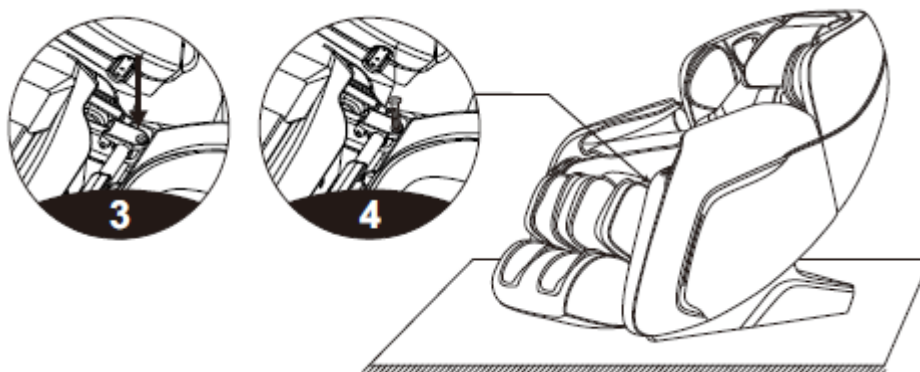


PILLOWS

 The cushions are fastened with a zipper for the backrest (1), the cushions for the headrest with Velcro (2).

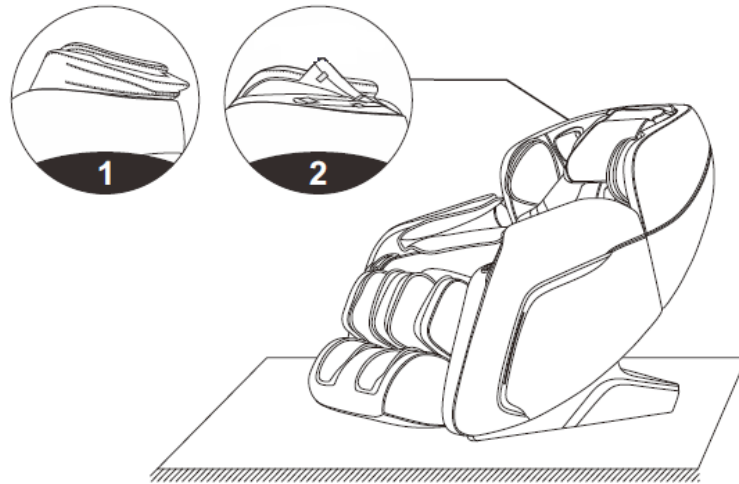

FLOOR PROTECTION

 We recommend using floor protection such as carpets or mats. The weight of the chair could damage the wooden floor.

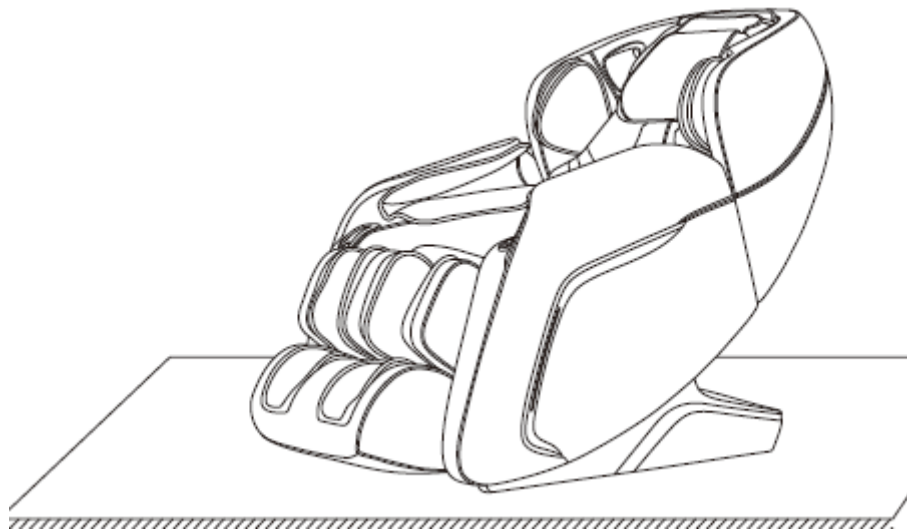


TRANSPORT

Before moving, make sure that you have switched off the chair and pulled it out of the el. current.

Push on the backrest, the chair will stand on the wheels.

 This move is only for a short distance, use auxiliary tools and more people to move for longer distances.

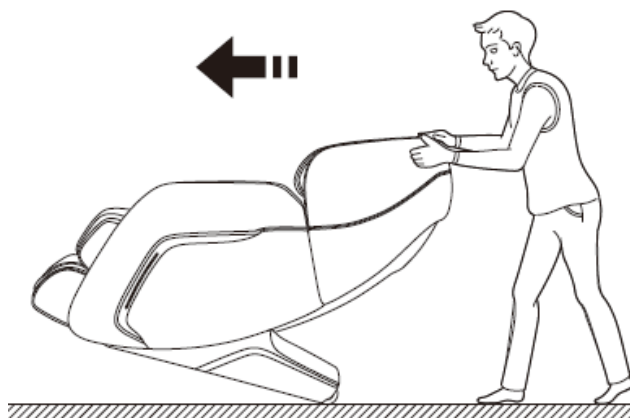

SPECIFICATIONS

Model:	A307
Name:	Massage armchair
Rated voltage:	110-120V 60 Hz 220-240V 50Hz/60Hz
Rated power input	120 W
Operation time	20 min
Safety:	Class I

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the

Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk