



USER MANUAL – EN

IN 25804 Power bank inSPORTline PowerTen II 10000 mAh

IN 25805 Power bank inSPORTline PowerFive II 5000 mAh

SAFETY INSTRUCTIONS

- Read this manual prior to first use and keep it for future reference.
- Use it only according to this manual and don't do any improper modification. Improper modifications or repairing can result in warranty void or in irreversible product damage. Contact service, if necessary.
- If you use this device for the first time after a long-time storing, it can be gradually and automatically discharged. Charge it fully before using it. This device can normally achieve the optimal performance after taking two or three complete charging/ discharging cycles. Recharge the battery every 3 months.
- Use only approved accessories. Use only recommended adapter and charging cables.
- Using non-original accessories can cause product damage.
- Use it only in well-aired rooms and avoid extreme temperatures. Too high or too low temperature can negatively influence battery performance.
- Charge the power bank at room temperature (approx. 20 °C). Always keep the power bank under supervision while charging. If the power bank or the power cable are damaged, never connect them to the electrical outlet. networks.
- Never drop it in water and protect it from liquids.
- Protect it from shocks and impacts to avoid product damage.
- Keep it away from children and pets. It is not a toy.
- This device can get heated during charging. Temperature can reach up to 55 °C.
- Don't put it near fire or heat sources.

- Never put any metal object near the Power Bank during charging. Should it happen, unplug the jack to avoid a short circuit and product breakage.
- Use it only according to local laws and regulations and never violate them. Turn off this device in places, where there is required (airplanes, near medical devices etc.). Follow local laws and recommendations to use it safely.
- Always charge under supervision.
- The charging cable + adapter should reach 5V/3A or 5V/2A 10W=5V.
- During the first charging cycles, charging may take longer, the charging time depends on the charger and cable used.

USE

The power bank starts automatically if you connect a charging device to it and turns off automatically after 38 seconds of disconnecting the device and inactivity.

After pressing the power button, the power bank's charging status indicators will light up for 38 seconds, unless the charging device is connected.

CAPACITY

	<1% - 25%
	<25% - 50%
	<50% - 75%
	<75% - 100%

PRODUCT DESCRIPTION



*Picture is for illustration purposes only.

1. Battery capacity indicator	2. Power button	3. USB output
4. USB Type-C input	5. Micro USB input	6. USB output

SPECIFICATIONS 25804 Power bank inSPORTline PowerTen II 10000 mAh

Type:	Polymer battery
Model:	EPTK5
Dimensions:	98.2 x 64.2 x 24.2 mm
Capacity:	10,000 mAh
Output	2x USB (5V/2A)
Input	USB Type-C, Micro USB (5V/2A)
Approx. charging time	7-8 hours
Operating temperature:	-10 °C + 40 °C

SPECIFIKACE 25805 Power bank inSPORTline PowerFive II 5000 mAh

Type:	Polymer battery
Model:	EPTK3
Dimensions:	98.2 x 64.2 x 14.2 mm
Capacity:	5000 mAh
Output	2x USB (5V/2A)
Input	USB Type-C, Micro USB (5V/2A)
Approx. charging time	7-8 hours
Operating temperature:	-10 °C + 40 °C

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha
5, 150 00, ČR
Headquaters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749
01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquaters, warranty & service center: Električná
6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

