



USER MANUAL – EN

IN 25983 Basketball inSPORTline Phoenix II

CONTENTS

SAFETY PRECAUTIONS..... 3
PARTS LIST 4
ASSEMBLY 6
ENVIRONMENT PROTECTION 10
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 10

 

 
 
 
 



 





SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY PRECAUTIONS

- Read this manual carefully before first using and keep it for future reference.
- This backboard must be firmly attached to a flat, clean and solid surface (wall) using included steel screws. Don't attach it to a wooden wall.
- Two adult people are necessary to assemble this product. Not to do it should cause serious injury or damage.
- This product must be assembled and maintained according to this manual only.
- Don't do any improper modification.
- Before assembling check that the package contains all parts. Check carefully that they are not damaged.
- Regularly check all parts for damage or wearing. Damaged or worn parts must be replaced immediately. Never use damaged equipment.
- Pay attention, especially if you use a ladder during assembly.
- All parts must be assembled properly and firmly tightened to avoid a fall apart.
- Protect it from high humidity. Steel parts could go rusty.
- Minimum operational height is 1.98 m (from the bottom to the backboard).
- Inform all other users of possible risks and dangers to avoid an injury.
- Don't hang other objects on the rim or on other product parts.
- While playing avoid contact of your face (teeth) with the backboard or the rim not to be hurt.
- Wear adequate sports clothes and shoes while playing. Avoid bracelets, necklaces, watches or rings. They could be easily caught in the net.
- Check all bolts and nuts before each using. They must fit well. Retighten them if necessary.
- Never use damaged or worn product.
- Before starting any exercising consult your physician about your health and fitness to avoid an injury.
- Keep children away from it. It is not a toy.
- Suitable for both indoor and outdoor using.
- Suitable only for home using.
- Base weight: Sand (50kg) or water (50 l)
- If you will the base with water, do not store the base in temperatures below zero.
- **WARNING!** Overexertion during training can lead to a serious injury or even death. If you start to feel faint, stop the exercise immediately.

PARTS LIST


No.	Name	Qty.
A1, A2	Bolt M8x35 mm, washer	1
B1, B2, B3	Bolt M8x45 mm, washer, nut	2
B4, B5, B6, B7	Bolt M8x120 mm, washer, spring, nut	2
C1, C2	Bolt M8x12 mm, washer	2
D1, D2, D3	Bolt M8x20 mm, washer, nut	2
F1, F2, F3	Bolt M10x 85 mm, washers, nuts	6
E1, E2, E3	Bolt M8x90 mm, washers, nuts	1
N1, N2, N3	Bolt M10x90 mm, washers, nuts	1
G	Wheels	2
H	Cover	1
I	Base cap	2
J	Hoop	1
K	Frame	1
L	Net	1
M	Plate	1
U1	Support frame (right)	1
U2	Support frame (left)	1
U3	Support frame (bottom left)	1
U4	Support frame (lower right)	1
O	Post holder	1
W	Top post	1
X	Middle post	1
Y	Bottom post	1
S	Base	1
Z	Wheel axis	2

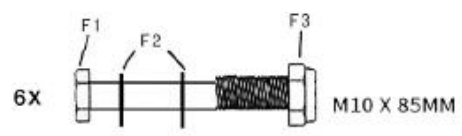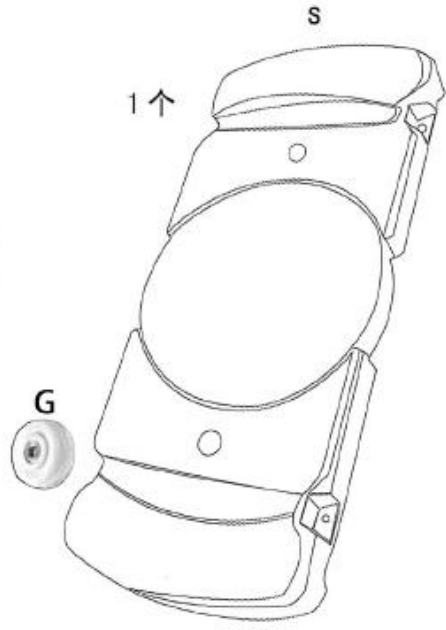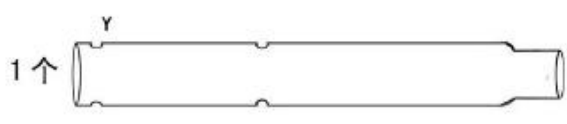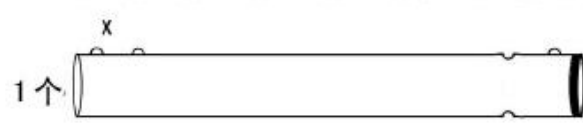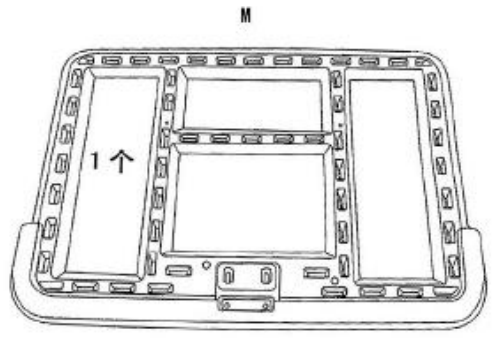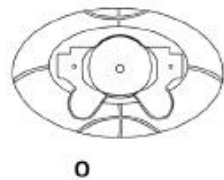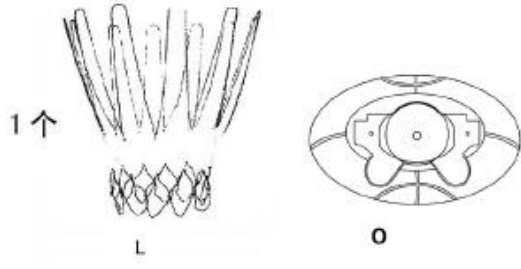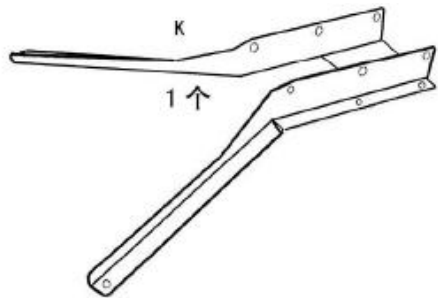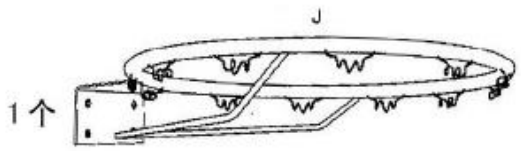

ASSEMBLY

Step 1


Slide the middle post (X) into the bottom post (Y). Insert the joined posts (X and Y) into the front base (O) and secure from the bottom with a bolt and washer (A1, A2).

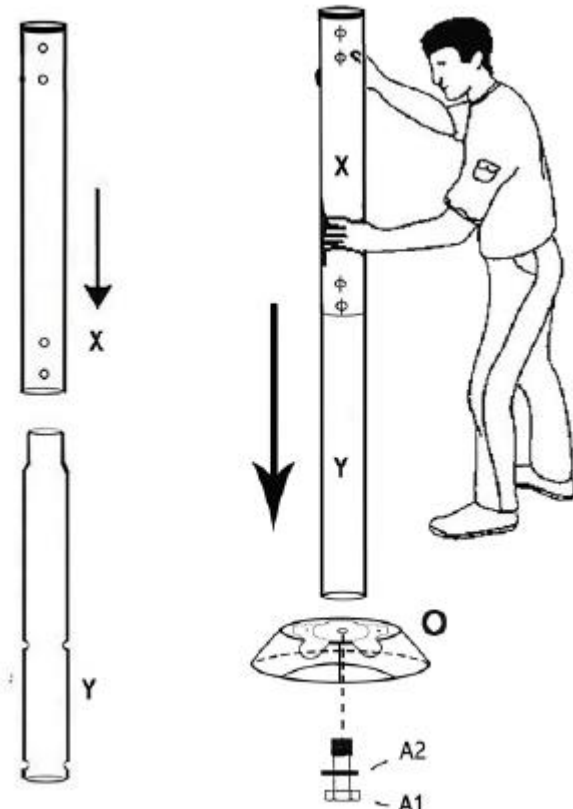

Step 2

Secure the posts (X and Y) with bolt, washers, and nut (F1, F2, F3). Attach the wheels (G) to the back of the base (S) with the axles (Z). Attach the frames (U3 and U4) from base (O) to base (S) with bolts, washers and nuts (E1, E2, E3).


Attach the frames (U1 and U2) from the post (Y) to the base (S) using screws, washers and nuts (N1, N2, N3).

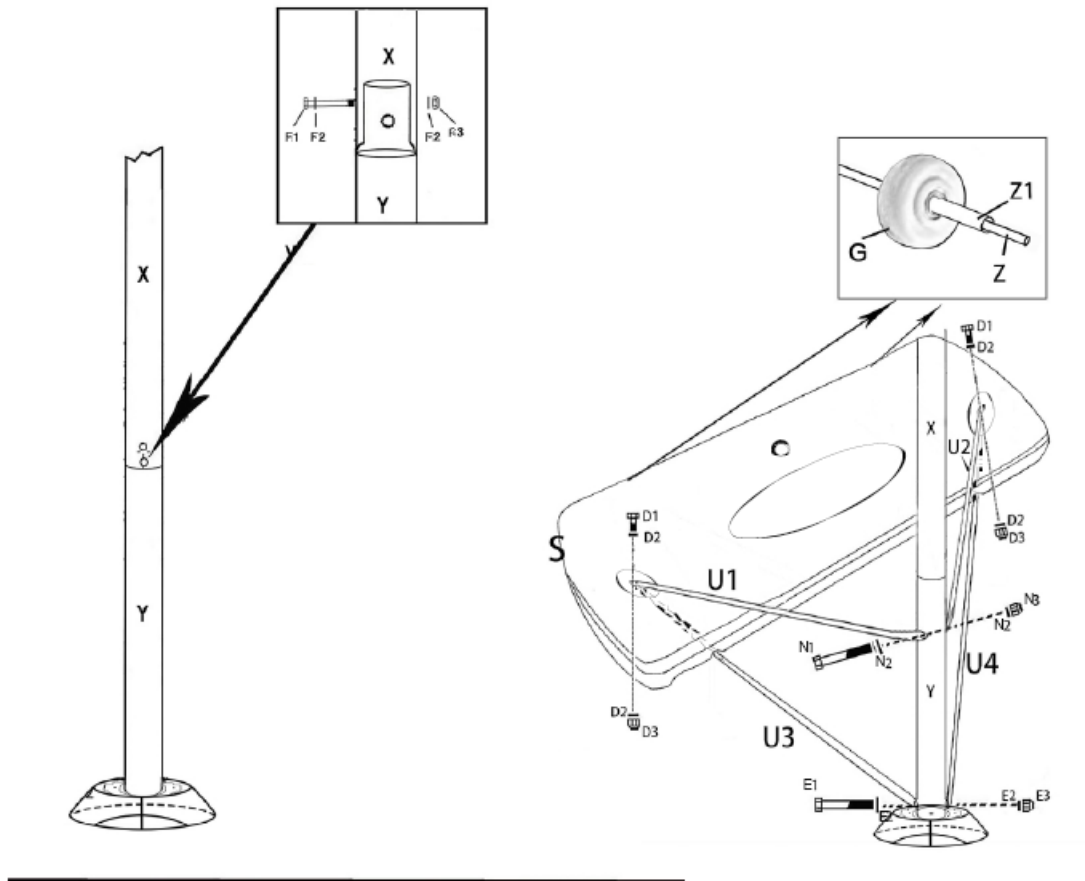

Step 3


With bolts, washers and nuts (B1, B2, B3), attach the hoop (J) and hoop holder (K) to the backboard (M) on the bottom.

With bolts, washers, springs and nuts (B4, B5, B6, B7), attach the hoop (J) and hoop holder (K) to the backboard (M) on the top.

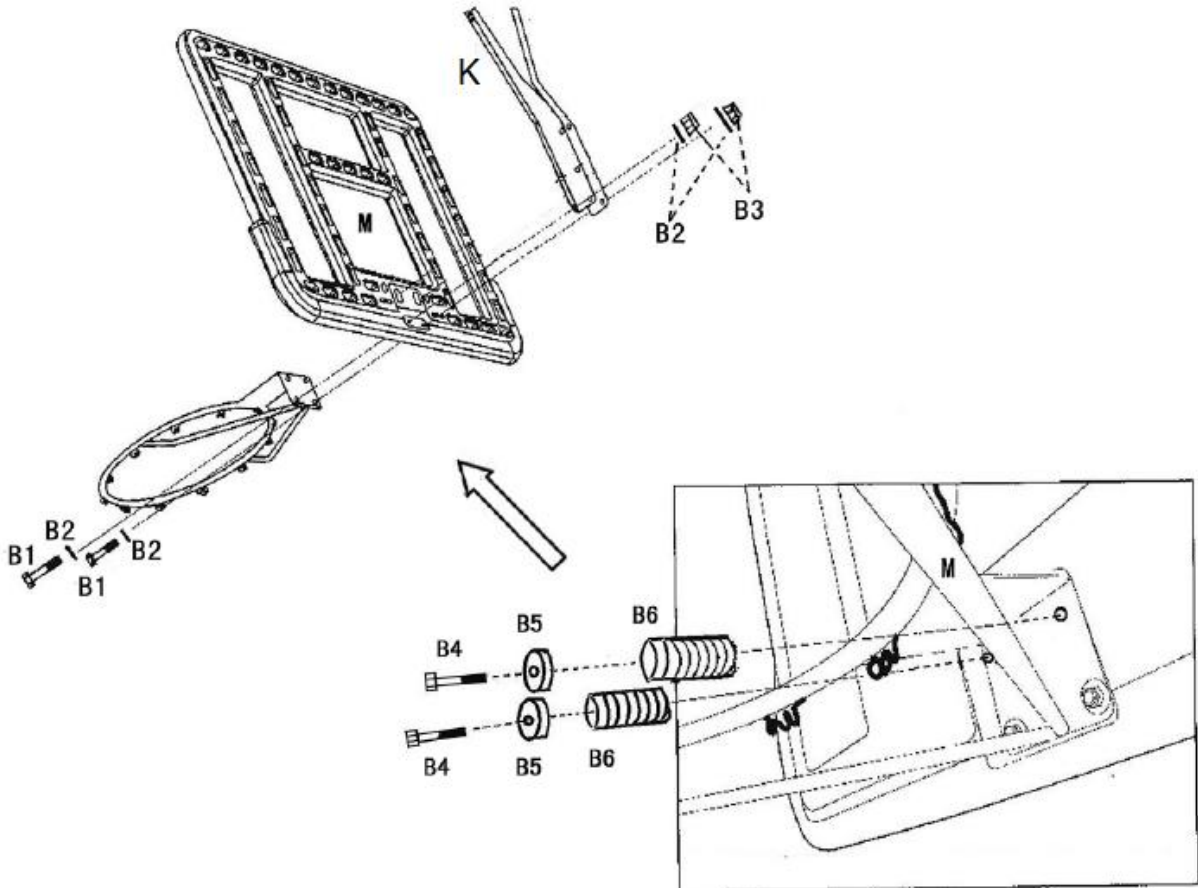


Step 4

Attach the hoop holder (K) to the backboard (M) with bolts and washers (C1, C2).

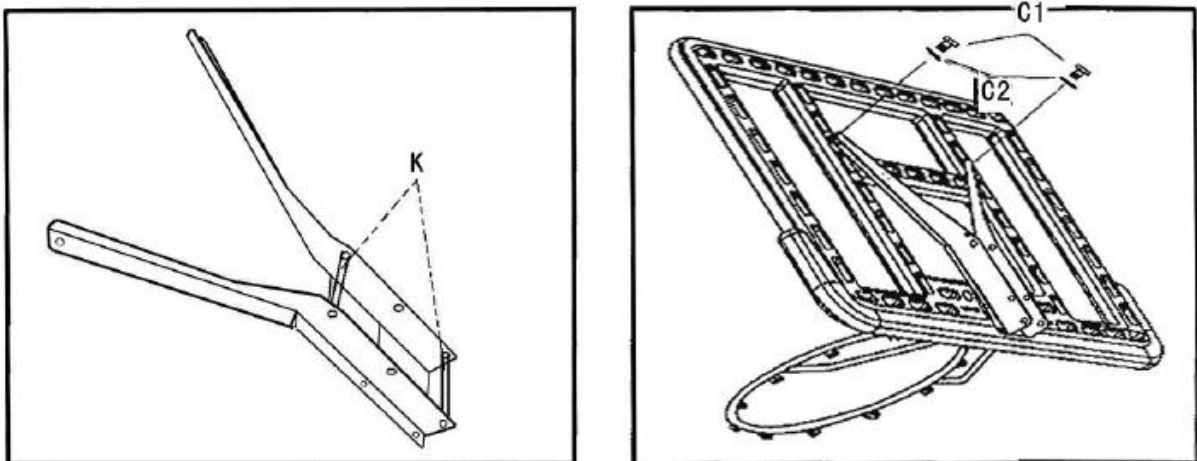


Step 5

Attach the upper post (W) to the hoop bracket (K) with bolts, washers and nuts (F1, F2, F3).

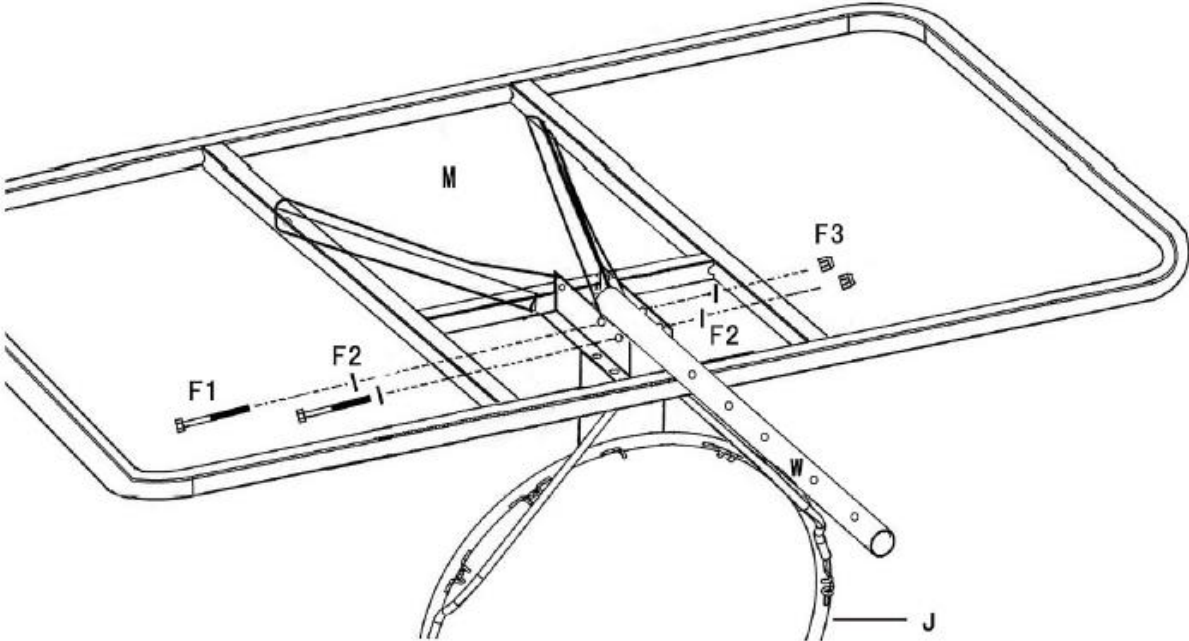


Step 6

Connect the upper post (W) to the post (Y) with the bolt, washers and nut (F1, F2, F3).

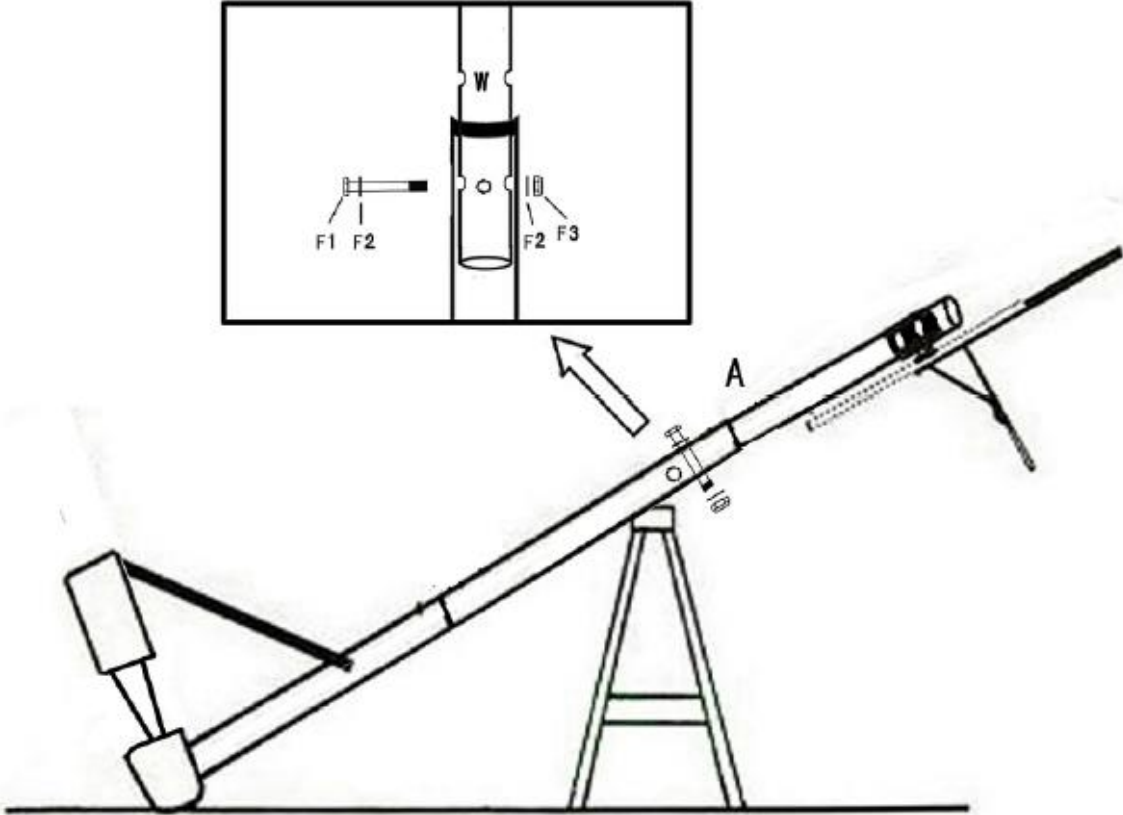


Step 7

Attach the net (L) to the hoop (J) as shown.

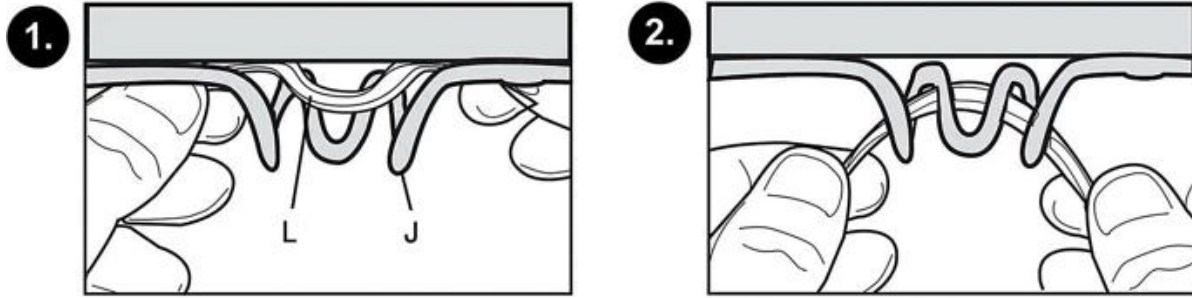

Pour sand into the base or pour water with antifreeze (however, we recommend pouring out the water if the temperature is close to 0°C). Note that if you use sand, it cannot be dumped from the base.

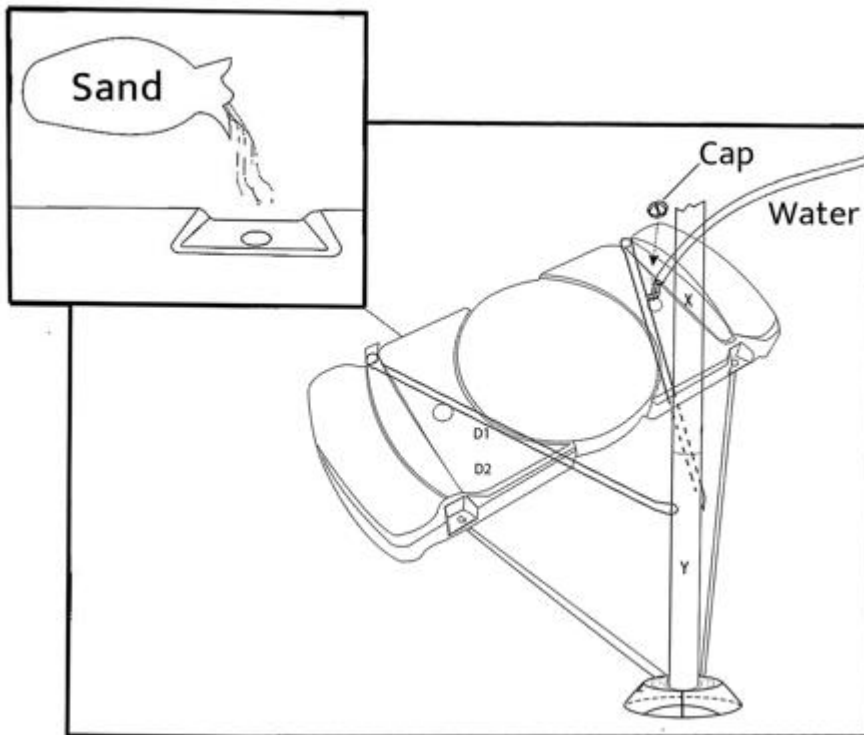

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User’s fault, i.e. product damage caused by unqualified repair work, improper assembly
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product’s serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical

characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ
SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00,
ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

Phone: +420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

**SK
inSPORTline s.r.o.**

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

